

Алматы (7273)495-231
 Ангарск (3955)60-70-56
 Архангельск (8182)63-90-72
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Благовещенск (4162)22-76-07
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Владикавказ (8672)28-90-48
 Владимир (4922)49-43-18
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Коломна (4966)23-41-49
 Кострома (4942)77-07-48
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Курган (3522)50-90-47
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Ноябрьск (3496)41-32-12
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16
 Петрозаводск (8142)55-98-37
 Псков (8112)59-10-37
 Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Саранск (8342)22-96-24
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13
 Сургут (3462)77-98-35
 Сыктывкар (8212)25-95-17
 Тамбов (4752)50-40-97
 Тверь (4822)63-31-35

Тольятти (8482)63-91-07
 Томск (3822)98-41-53
 Тула (4872)33-79-87
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Улан-Удэ (3012)59-97-51
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Чебоксары (8352)28-53-07
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Чита (3022)38-34-83
 Якутск (4112)23-90-97
 Ярославль (4852)69-52-93

Россия +7(495)268-04-70


Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://mac.nt-rt.ru> || mcp@nt-rt.ru

Individual mounting



Inline

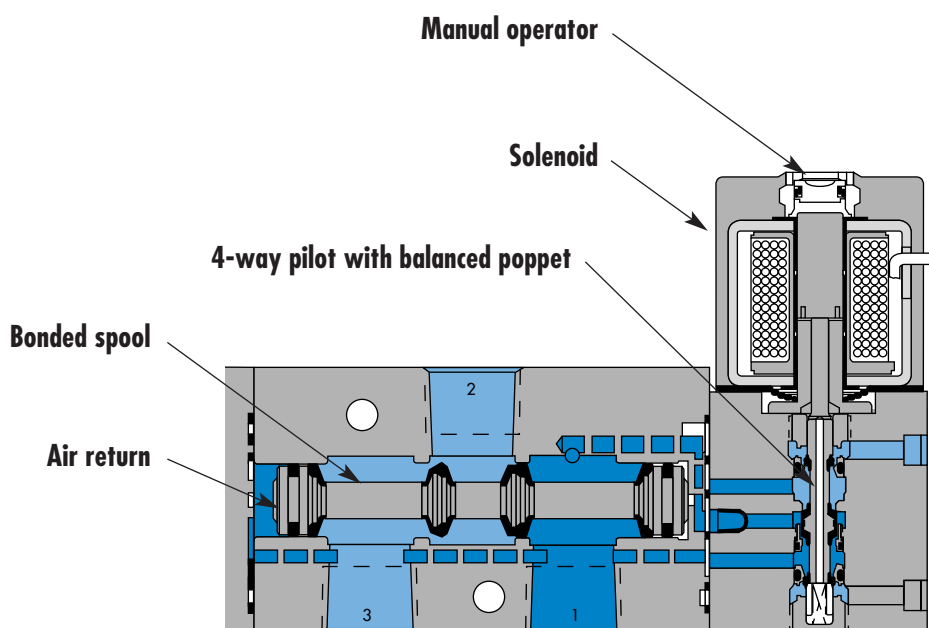

SERIES FEATURES

- Patented MACSOLENOID® for fastest possible response times and virtually burn-out proof AC solenoid operation.
- Optional low watt DC solenoids.
- Various manual operators.
- Optional memory spring.
- Normally closed or normally open valve function.
- May be plugged for 2-way operation.
- Internal or external pilot.

SPOOL CONFIGURATIONS

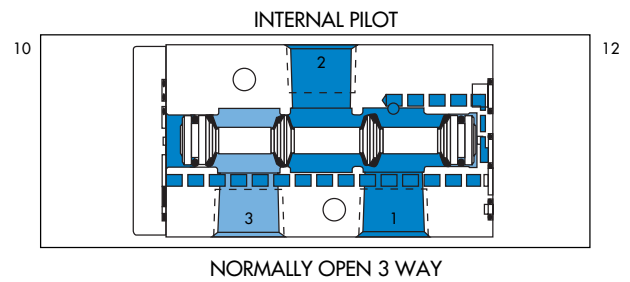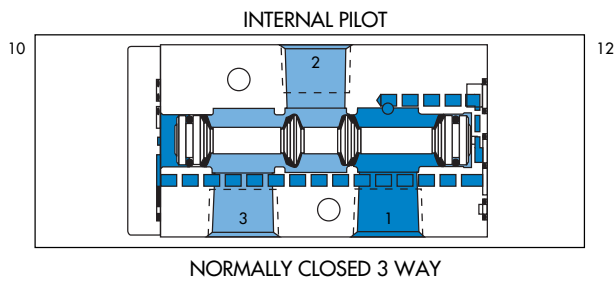

Function	Port size	Flow [Max]	Individual mounting	Series
3/2 NO-NC, 2/2 NO-NC	1/8" - 1/4"	1.5 C_v	Inline	

OPERATIONAL BENEFITS

1. The 4-way pilot develops maximum shifting force both ways.
2. Memory spring available.
3. Balanced spool, immune to variations of pressure, also provides high flow.
4. Short stroke with high flow.
5. Bonded spool with minimum friction, shifting in a glass-like finished bore.
6. Pilot with balanced poppet, high flow, short and consistent response times.
7. Wiping effect eliminates sticking.
8. Long service life.



33
34
36
32
37
38
52

HOW TO ORDER

Port size	Pilot air	Single Operator		Double Operator	
		NO Valve	NC Valve	NO Valve	NC Valve
1/8" NPTF	Internal	52A-31-A0A-XX-X- XXX-XXX	52A-11-A0A-XX-X- XXX-XXX	52A-41-A0A-XX-X- XXX-XXX	52A-21-A0A-XX-X- XXX-XXX
1/4" NPTF	Internal	52A-31-B0A-XX-X- XXX-XXX	52A-11-B0A-XX-X- XXX-XXX	52A-41-B0A-XX-X- XXX-XXX	52A-21-B0A-XX-X- XXX-XXX
1/8" NPTF	External	52A-31-A0B-XX-X- XXX-XXX	52A-11-A0B-XX-X- XXX-XXX	52A-41-A0B-XX-X- XXX-XXX	52A-21-A0B-XX-X- XXX-XXX
1/4" NPTF	External	52A-31-B0B-XX-X- XXX-XXX	52A-11-B0B-XX-X- XXX-XXX	52A-41-B0B-XX-X- XXX-XXX	52A-21-B0B-XX-X- XXX-XXX

67
69
44
46
42
47
48P

SOLENOID OPERATOR ➤

DM-D **XXX-XXX***

XX	Voltage	X	Wire length	X	Manual operator	XX	Electrical connection
JA	110/50, 120/60 (2.9W)	A	18" (Flying leads)	1	Non-locking recessed	KA	Square connector
JB	220/50, 240/60 (2.9W)	B	24" (Flying leads)	2	Locking recessed	KD	Square connector with light
JC	24/60 (2.9W)	J	Connector			JB	Rectangular connector
FB	24 VDC (1.8W)					JD	Rectangular connector with light
DA	24 VDC (5.4W)					BA	Flying leads
DF	24 VDC (12.7W)						

48
400
92

SOLENOID OPERATOR ➤

GM-G **XXX-XXX****

XX	Voltage	X	Wire length	X	Manual operator	XX	Electrical connection
DC	24 VDC (1.8W)	A	18"	1	Non-locking recessed	BA	Flying leads
DD	24 VDC (2.5W)	B	24"	2	Locking recessed	BT	Flying leads with light
DF	24 VDC (4.0W)	C	36"			KA	Plug-in wire assy.
						KT	Plug-in wire assy. with light

93

* Other options available, see page 309.
** Other options available, see page 313.

OPTIONS

52A-31-A0A-XX-X-**XXX-XXX**

For memory spring, replace by **4** (single solenoid only)

ISO 01
ISO 02
ISO 1
ISO 2
ISO 3



Codification table for voltages / Manual operator / Electrical connection

VALVE CODE > **-DM- D** **XX** **X-X** **XX**
1 2 3 4

OPTIONS AVAILABLE FOR

- Pilot operated valves 52, 67, 92, 93, 400, ISO1, ISO2, ISO3 Series

1. VOLTAGE

D-XX X-X XX	VOLTAGE
DA	24 VDC (5.4W)
DB	12 VDC (5.4W)
DC	12 VDC (7.5W)
DD	24 VDC (7.3W)
DE	12 VDC (12.7W)
DF	24 VDC (12.7W)
DK	110 VDC (4.7W)
DJ	28 VDC (5.2W)
DL	64 VDC (6.0W)
DM	36 VDC (5.3W)
DN	6 VDC (6.0W)
DR	90 VDC (6.6W)
DS	110 VDC (7.3W)
DT	75 VDC (5.6W)
DP	48 VDC (5.8W)
FA	12 VDC (1.8W)
FB	24 VDC (1.8W)
FE	12 VDC (2.4W)
FF	24 VDC (2.4W)
JA	120/60, 110/50 (2.9W)
JB	240/60, 220/50 (2.9W)
JC	24/60, 24/50 (3.7W)
JD	100/60, 100/50, 110/60 (3.9W)
JE	220/60 (3.4W)
JF	240/50 (2.8W)
JG	200/60, 200/50 (3.9W)

2. WIRE LENGTH

D-XX X-X XX	WIRE LENGTH
O	No wires
A	18"
B	24"
C	36"
D	48"
E	72"
F	96"

3. MANUAL OPERATOR

D-XX X-X XX	MANUAL OPERATOR
0	No operator
1	Non-locking recessed
2	Locking recessed
3	Non-locking extended
4	Locking extended

4. ELECTRICAL CONNECTION

D-XX X-X XX	ELECTRICAL CONNECTION
BA*	Flying leads (grommet)
BK*	BA with protection diode
BL*	BA with protection varistor
BM**	Flying leads (solenoid plug-in)
BN**	BM with protection diode
BP**	BM with protection varistor
BG**	BM with ground
BH**	BM with protection diode & ground
BJ**	BM with protection varistor & ground
CA*	1/2" NPS conduit with flying leads
CM*	1/2" NPS metal conduit with flying leads
CN*	1/2" NPS metal conduit with flying leads & ground
JB	Rectangular connector
JD	JB with light
JM	Rectangular connector (male only)
KA	Mini square connector
KB	KA with protection diode
KC	KA with protection varistor
KD	KA with light
KE	KA with light and protection diode
KF	KA with light and protection varistor
KG	KA with light & diode
KJ	Mini square connector (male only)
KK	KJ with protection diode (male only)
KL	KJ with protection varistor (male only)
TA	Dual tabs with receptacles
TB	TA with protection diode
TD	TA with light
TE	TA with light and protection diode
TJ	Dual tabs (male only)
TK	TJ with protection diode
TM	TJ with light
TN	TJ with light and protection diode

* From Lead wire length options choose A through F

** From Lead wire length options choose O through F

Note: When coil is above 30 volts, a ground wire is required. Applies to options with flying leads.

Codification table for voltages / Manual operators / Electrical connections

VALVE CODE ➤ **-GM- G XX X-X XX**
1 2 3 4

OPTIONS AVAILABLE FOR

- Solenoid valves 52 & 400 Series

1. VOLTAGE	
G-XX X-X XX	VOLTAGE
DC	24 VDC (1.8 W)
DD	24 VDC (2.5 W)
DE	24 VDC (3.0 W)
DF	24 VDC (4.0 W)
DJ	12 VDC (1.8 W)
DK	12 VDC (2.5 W)
DM	12 VDC (3.0 W)
DN	12 VDC (4.0 W)

2. WIRE LENGTH	
G-XX X-X XX	WIRE LENGTH
O	No lead wire (use only with "KJ" & "KM" electrical connectors)
A	18"
B	24"
C	36"
D	48"
E	72"
F	96"
G	120"
H	144"

3. MANUAL OPERATOR	
G-XX X-X XX	MANUAL OPERATOR
1	Non-locking recessed
2	Locking recessed
3	Non-locking extended
4	Locking extended

4. ELECTRICAL CONNECTION	
G-XX X-X XX	ELECTRICAL CONNECTION
BA	Flying leads
BB	BA with ground wire
BC	BA with light parallel to leads
BD	BA with light parallel to leads & ground wire
BE	BA with suppression diode
BF	BA with suppression diode & ground wire
BG	BA with suppression diode plus light parallel to leads
BH	BA with suppression diode plus light parallel to leads & ground wire
*BN	BA with suppression diode plus blocking diode
*BP	BA with suppression diode plus blocking diode & ground wire
*BR	BA with suppression diode plus blocking diode & light parallel to leads
*BS	BA with suppression diode plus blocking diode & light parallel to leads & ground wire
BT	BA with light on top
BU	BA with light on top & ground wire
BV	BA with suppression diode plus light on top
BW	BA with suppression diode plus light on top & ground wire
*BX	BA with suppression diode plus blocking diode & light on top
*BY	BA with suppression diode plus blocking diode & light on top & ground wire

G-XX X-X XX	SOLENOID PLUG-IN CONNECTOR WITH LEADS
GA	MAC JAC Solenoid plug-in
GB	MAC JAC Solenoid plug-in w/Diode
GC	MAC JAC Solenoid plug-in w/MOV
GD	MAC JAC Solenoid plug-in w/LED
GE	MAC JAC Solenoid plug-in w/Diode & LED
GF	MAC JAC Solenoid plug-in w/MOV & LED
GG	MAC JAC Solenoid plug-in w/Rectifier
GH	MAC JAC Solenoid plug-in w/Rectifier & LED
KA	Plug-in wire assembly
KB	KA with ground wire
KE	KA with suppression diode
KF	KA with suppression diode & ground wire
KJ	Plug-in housing without wire assembly ('KA' without wire assembly)
KM	Plug-in housing without wire assembly ('KB' without wire assembly)
*KN	KA with suppression diode plus blocking diode
*KP	KA with suppression diode plus blocking diode & ground wire
KT	KA with light on top
KU	KA with light on top & ground wire
KV	KA with suppression diode plus light on top
KW	KA with suppression diode plus light & ground wire
*KX	KA with suppression diode plus blocking diode & light on top
*KY	KA with suppression diode plus blocking diode & light on top & ground wire

Note: Blocking diode is located in the lead wire

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Чукотск (4112)23-90-97
Ярославль (4852)69-52-93