

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://mac.nt-rt.ru> || mcp@nt-rt.ru

Specifications

83 Series Valve

Fluids:

Compressed air or inert gases

Lubrication:

Not required. If used, select a medium aniline point lubricant (between 180° and 210°F)

Safe Operating Temperature Range:

0°F to 120°F (-18°C to 50°C)

Pressure Range:

Main Valve: Vacuum to 120 PSI (External pilot)
20 to 120 PSI (Internal pilot)
35 to 120 PSI (Internal pilot and memory spring)
30 to 120 PSI (3 Position)

External pilot: 20 to 120 PSI
35 to 120 PSI (Memory spring)
30 to 120 PSI (3 Position)

Single remote air: Same as above
35 to 60 PSI (Remote pilot signal - This signal is independent of the main valve or pilot valve pressure)

Double Remote: 20 to 120 PSI

 
Note: Ext. pilot or double remote signal pressure must be equal to or greater than main valve pressure

Flow:

Cv = 1.5 (2 Position)

Cv = 1.1 (3 Position)

MAC 83 Series

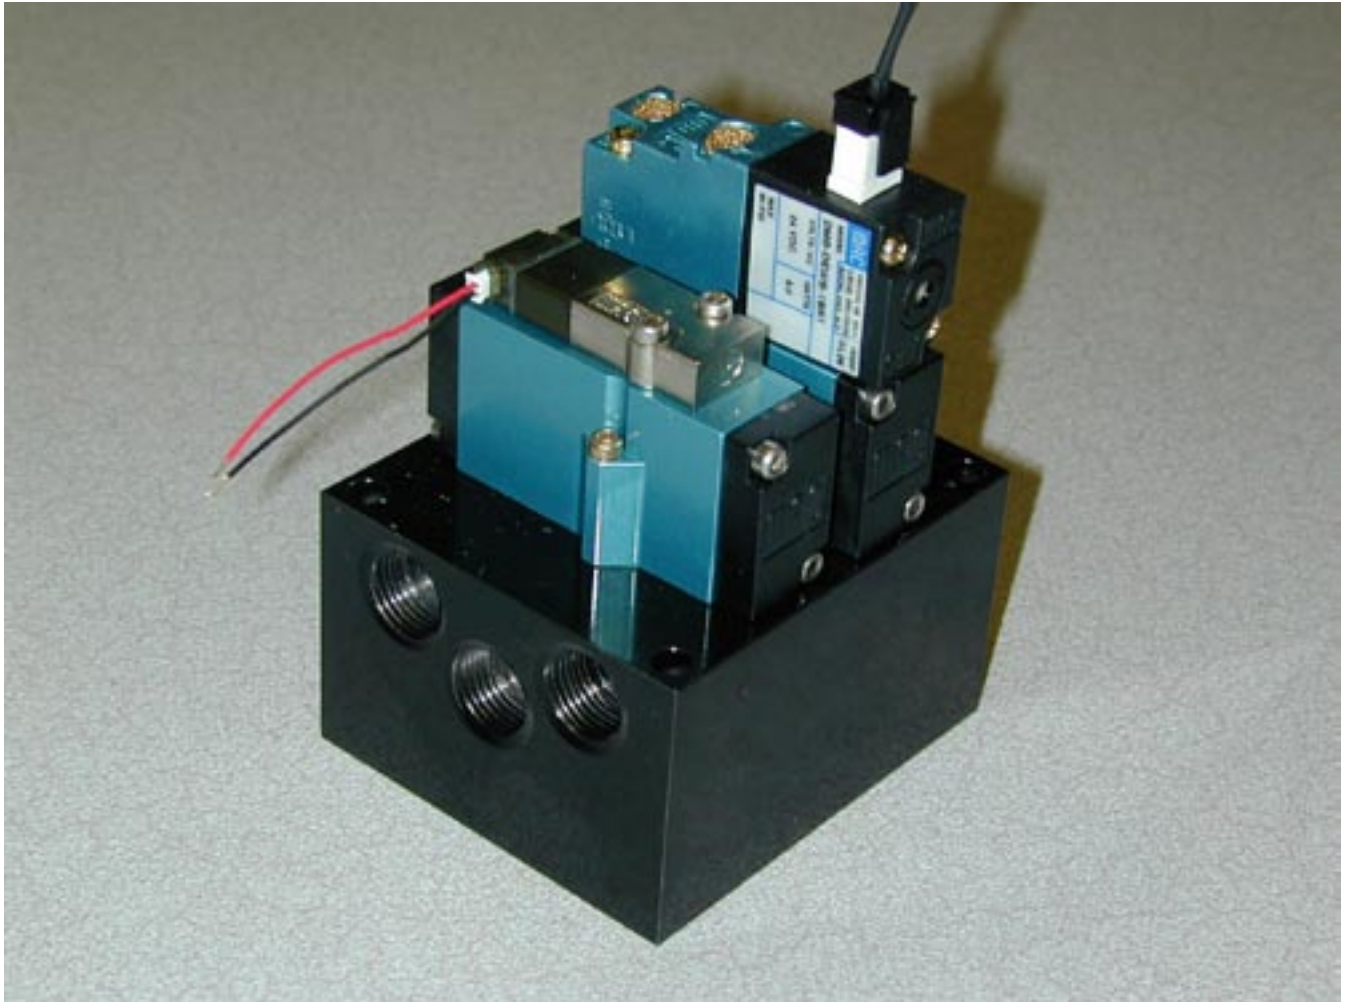

How to Order 83 Series

83A - X X X - XX-XXXX-XXX

Pilot Valve Model Numbering

Spool Type

0 Base Only
 A Sgl. Oper. Sgl. Press.
 B Dbl. Oper. Sgl. Press.
 C Sgl. Oper. Dual Press.
 D Dbl. Oper. Dual Press.
 E 3 Pos. Closed Center
 F 3 Pos. Open Center
 G 3 Pos. Dual Press.,
 Press. Center
 M Sgl. Oper. Sgl. Press.
 w/ memory spring
 N Sgl. Oper. Dual Press.
 w/ memory spring

Pilot Air Options

A Internal Pilot
 B Internal Pilot Dual Press
 supply from #5 port
 D Ext. Pilot from 14 End
 E Ext. Pilot from 12 End

Base Port Size and Thread Type

0 Valve Only

Side Cyl. Ports

A 1/4 NPTF
 B 3/8 NPTF
 C 1/4 BSPPL
 D 3/8 BSPPL
 E 1/4 BSPTR
 F 3/8 BSPTR

Bottom Cyl. Ports

G 1/4" NPTF
 H 1/4" BSPPL
 J 1/4" BSPTR

How to Order Pilot Valve Options For 83 Series (Sgl. Operators) (Partial Listing)

DM-D XX X - X XX

Voltage	Wire Length	Manual Operator	Electrical Connection
JA 110/50, 120/60 (2.9W)	A 18"	1 Recessed Non-Locking Operator	KA Square Connector
JB 220/50, 240/60 (2.9W)	B 24"	2 Recessed Locking Operator	KD Square Connector with Light
JC 24/60 (2.9W)	J* 6"		JB Rectangular Connector
FB 24 VDC (1.8W)			JD Rectangular Connector with Light
DA 24 VDC (5.4W)			BA Flying Leads
DF 24 VDC (12.7W)			

* For use with "J" & "K" type connectors

GM-G XX X - X XX

Voltage	Wire Length	Manual Operator	Electrical Connection
DC 24 VDC (1.8W)	A 18"	1 Recessed Non-Locking Operator	BA Flying Leads
DD 24 VDC (2.5W)	B 24"	2 Recessed Locking Operator	BT Flying Leads with Light
DF 24 VDC (4.0W)	C 36"		KA Solenoid Plug-In Wire Assembly
			KT Solenoid Plug-In Wire Assembly with Light
			GA MAC JAC Solenoid Plug-In Wire Assembly

RM-R XX X - X XX

Voltage	Wire Length	Manual Operator	Electrical Connection
DC 24 VDC (1.8W)	A 18"	1 Recessed Non-Locking Operator	BA Flying Leads
DD 24 VDC (2.5W)	B 24"	3 Extended Non Locking Operator	RA Mini JAC Solenoid Plug-In
DF 24 VDC (4.0W)	C 36"		RB Mini JAC Solenoid Plug-In with LED
DJ 12 VDC (1.8W)			TA JST Solenoid Plug-In
DK 12 VDC (2.5W)			TB JST Solenoid Plug-In w/ LED
DM 12 VDC (4.0W)			

DM-RA1 X (For Single Remote Air Operator)

Pilot Port Size and Thread Type
1 1/8" NPTF
4 1/8" BSPPL
5 1/8" BSPRT

How to Order Pilot Valve Options For 83 Series (Dbl. Operators) (Partial Listing)

TM-D XX X - X XX

Voltage	Wire Length	Manual Operator	Electrical Connection
AA 110/50, 120/60	A 18"	1 Recessed Non-Locking Operator	KA Square Connector
AB 220/50, 240/60	B 24"		KD Square Connector with Light
AC 24/60	J* 6"	2 Recessed Locking Operator	JB Rectangular Connector
FB 24 VDC (1.8W)			JD Rectangular Connector with Light
DA 24 VDC (5.4W)			BA Flying Leads
DF 24 VDC (12.7W)			


* For use with "J" & "K" type connectors

RM-R XX X - X XX

Voltage	Wire Length	Manual Operator	Electrical Connection
DA 24 VDC (0.5w)	0* No lead wire	0 No Operator	BA Flying Leads
DB 24 VDC (1.0w)	A 18"	1 Recessed Non-Locking Operator	BB Flying Leads w/ LED
DC 24 VDC (1.8W)	B 24"		BC Flying Leads w/ MOV
DD 24 VDC (2.5W)	C 36"	3 Extended Non Locking Operator	BD Flying Leads w/ LED and MOV
DE 24 VDC (3.0w)	D 48"		
DF 24 VDC (4.0W)	E 72"		RA Mini JAC Solenoid Plug-In
	F 96"		RB Mini JAC Solenoid Plug-In with LED
DG 12 VDC (0.5w)	G 120"		RC Mini JAC Solenoid Plug-In with MOV
DH 12 VDC (1.0w)	H 144"		RD Mini JAC Solenoid Plug-In with LED and MOV
DJ 12 VDC (1.8W)			
DK 12 VDC (2.5W)			TA JST Solenoid Plug-In
DL 12 VDC (3.0w)			TB JST Solenoid Plug-In w/ LED
DM 12 VDC (4.0W)			TC JST Solenoid Plug-In w/ MOV
			TD JST Solenoid Plug-In w/ LED and MOV

*Not available for flying leads connector

 
How to Order 83 Series Double Remote Air

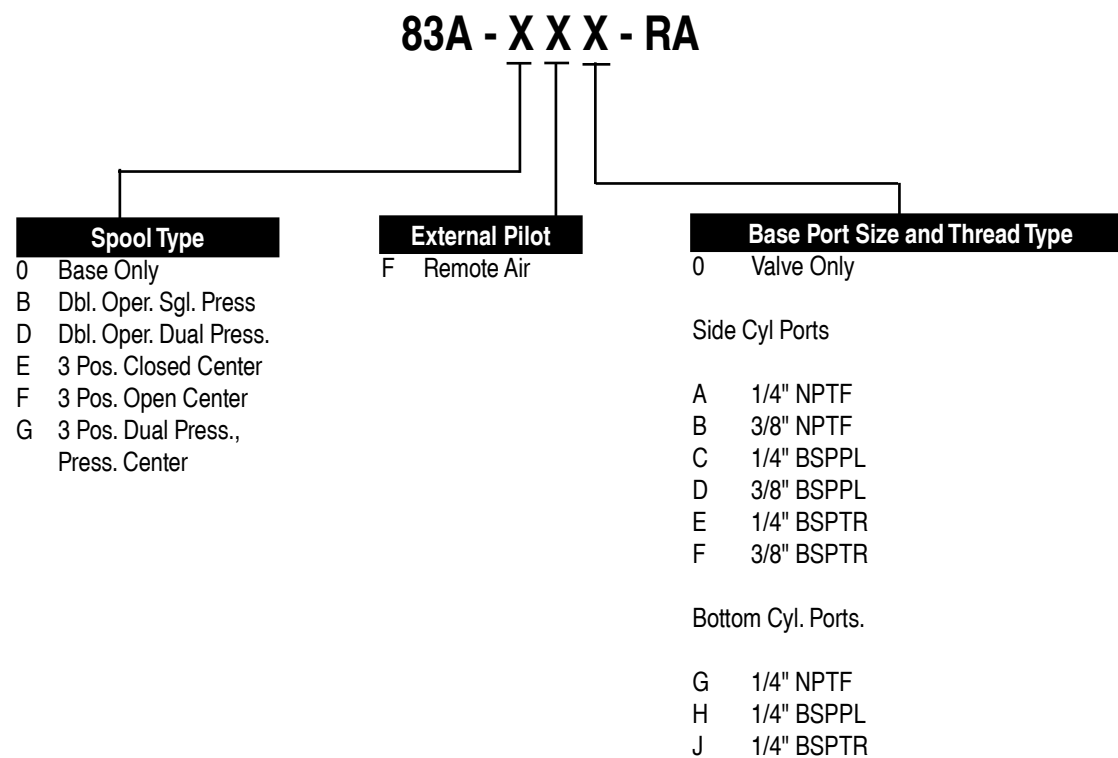

How to Order 83 Series

EBM Circuit Bar

 
EBM83A - XX X X X - XX - 9

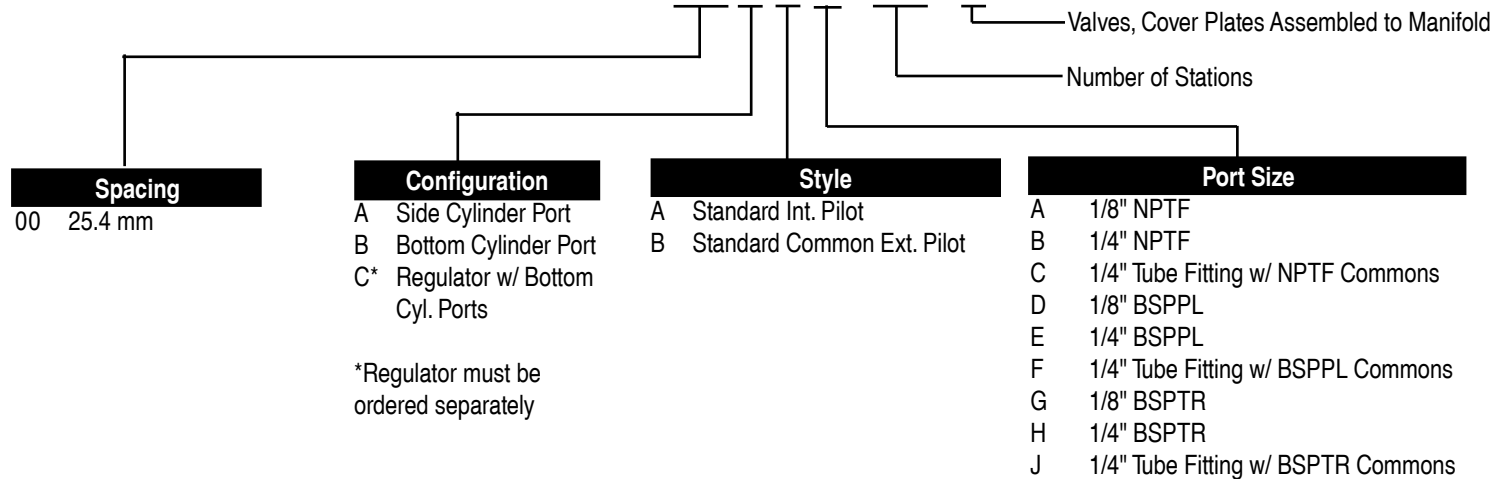


Common Through Ports are 3/8"



How to Order Regulator

  PR92C - X X X X - 9

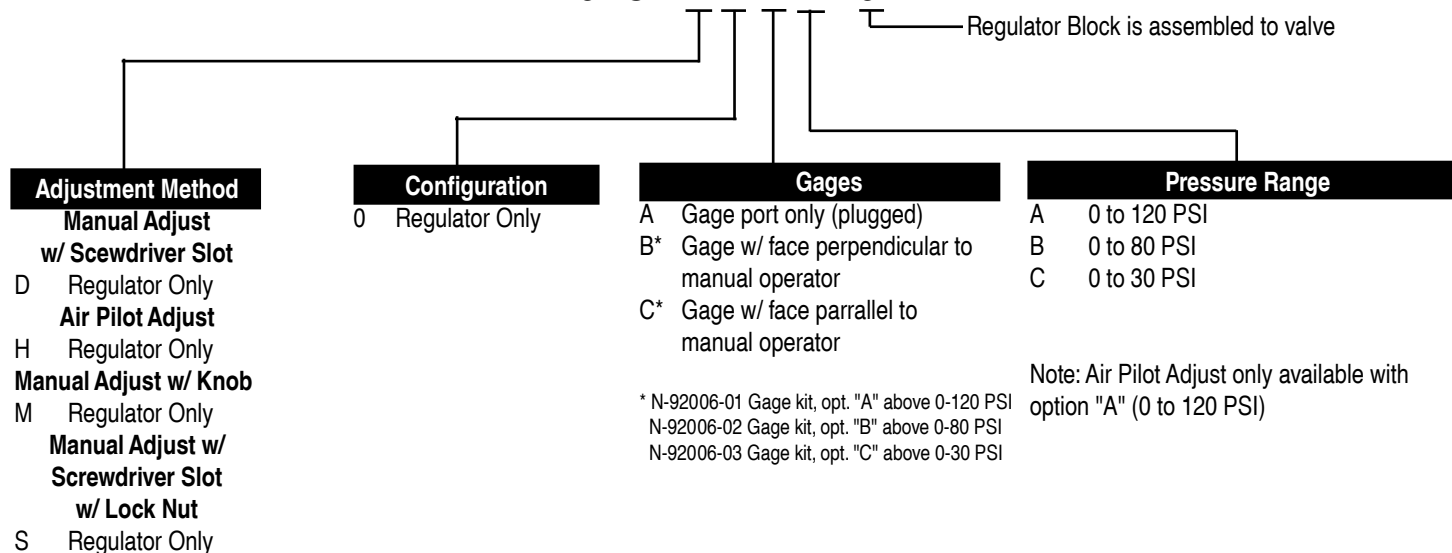


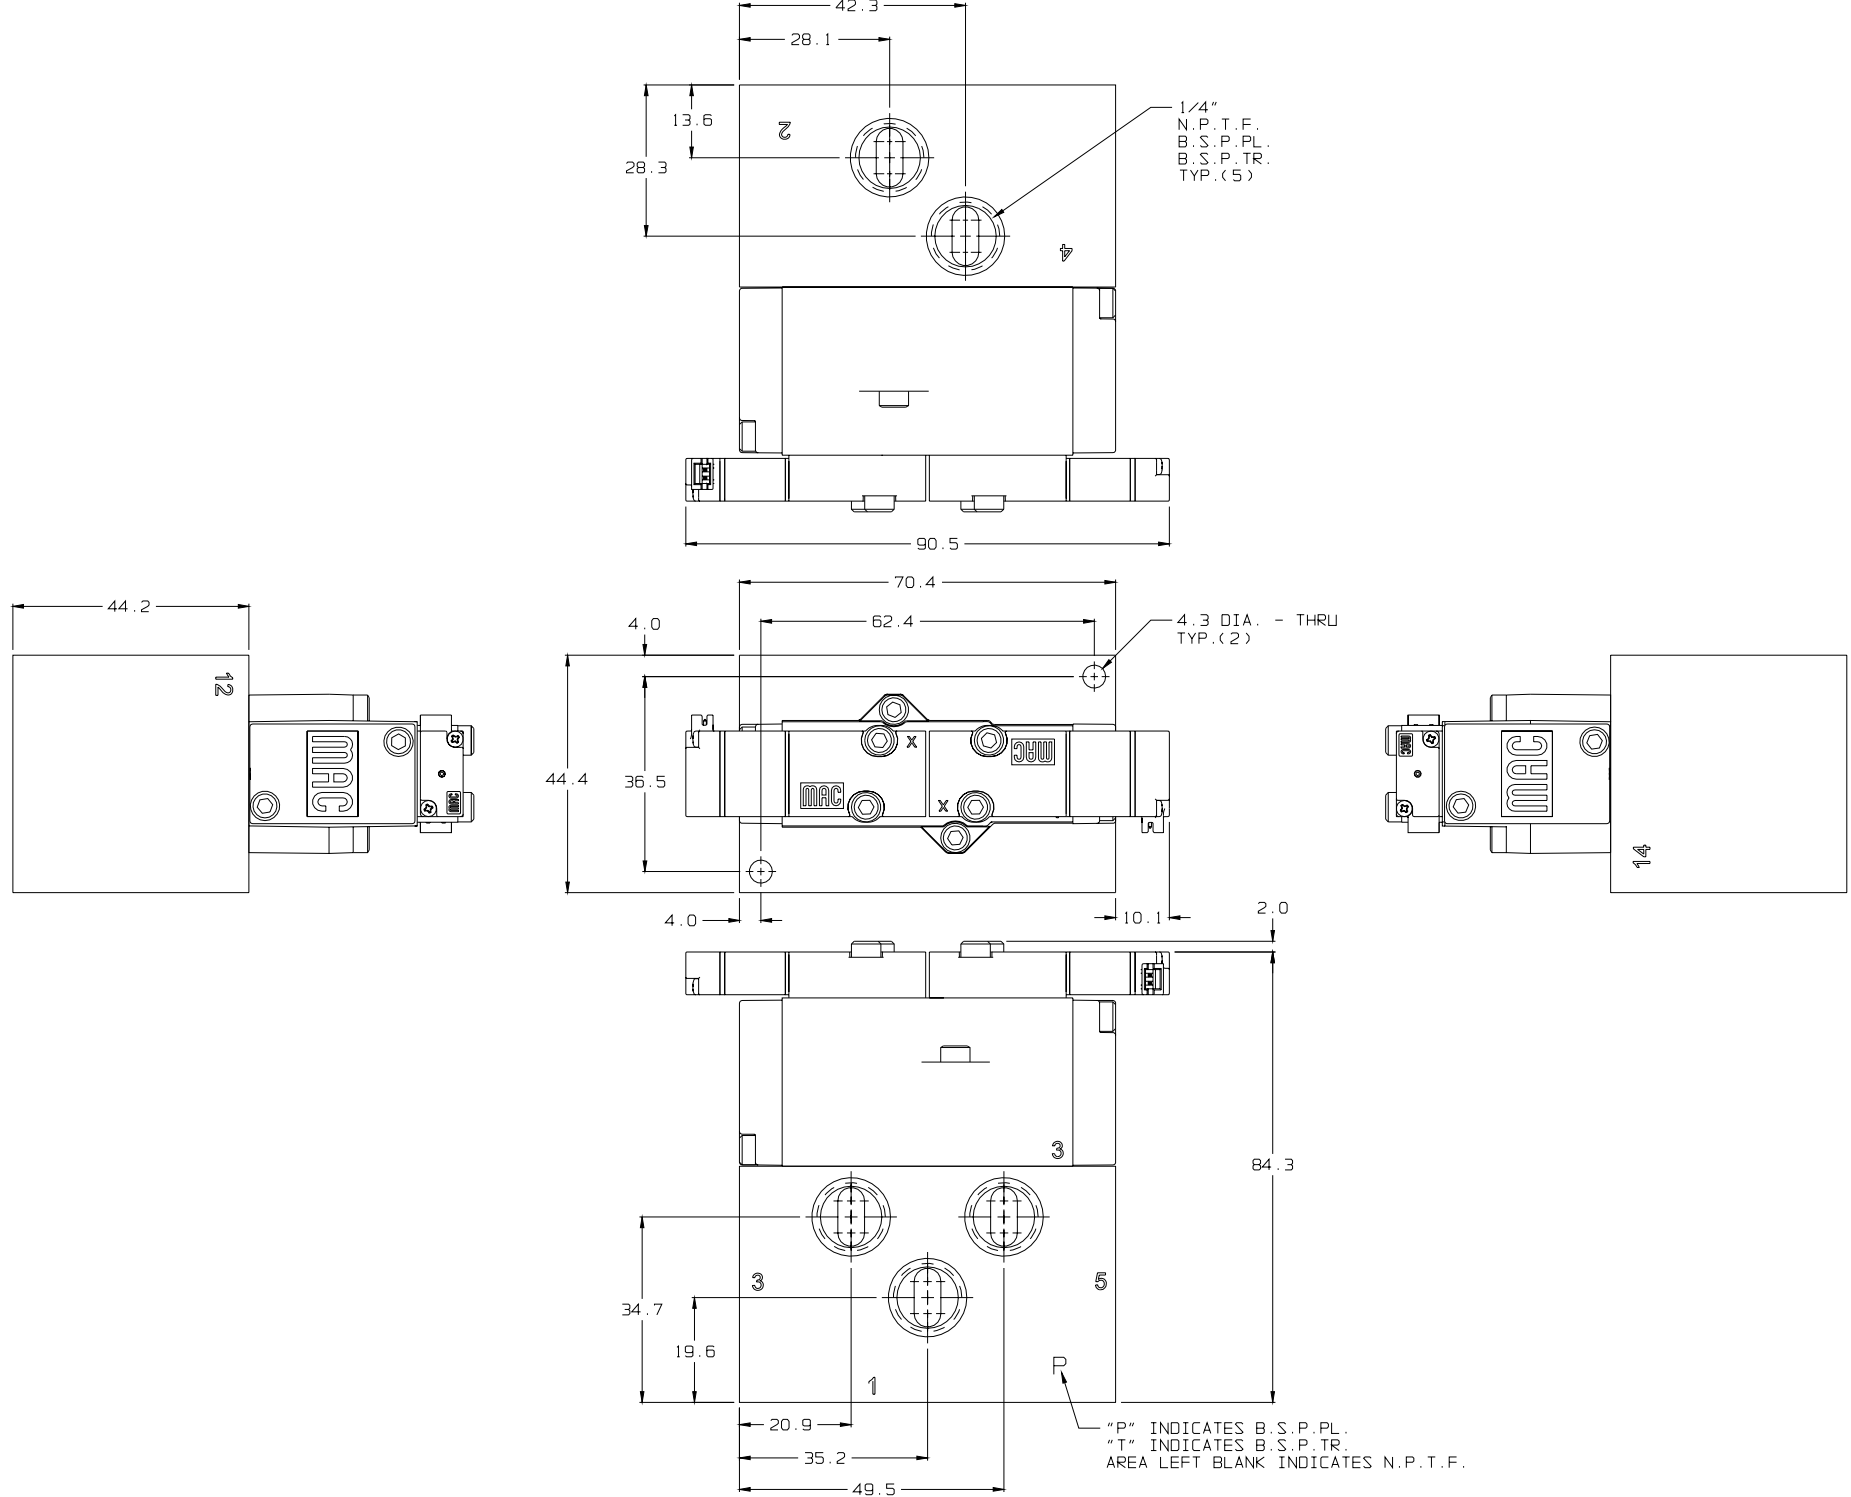


  83 Series Individual Base
1/4" Side Ports (shown w/ RM3 Pilots)




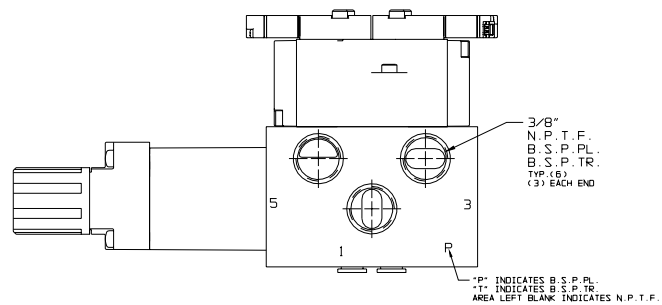
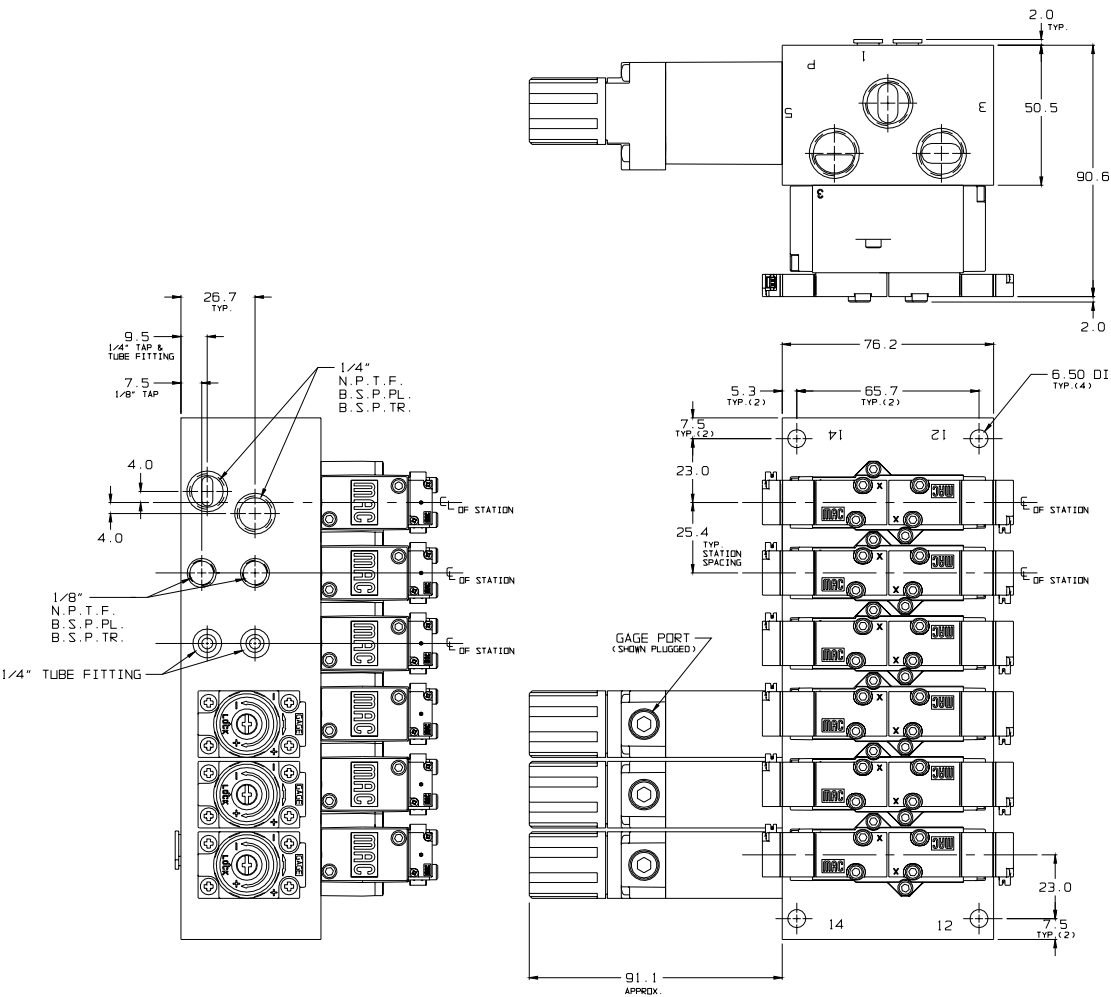


83 Series EBM Circuit Bar (non plug-in)

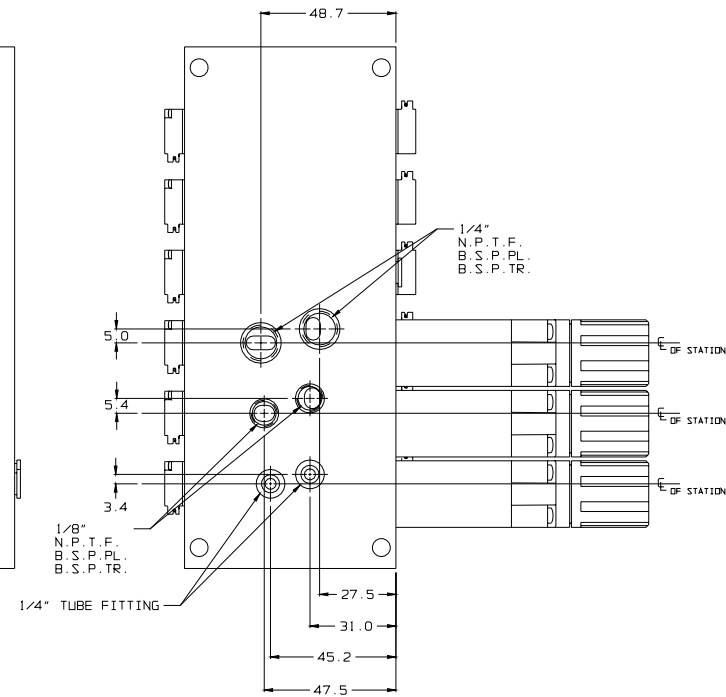 


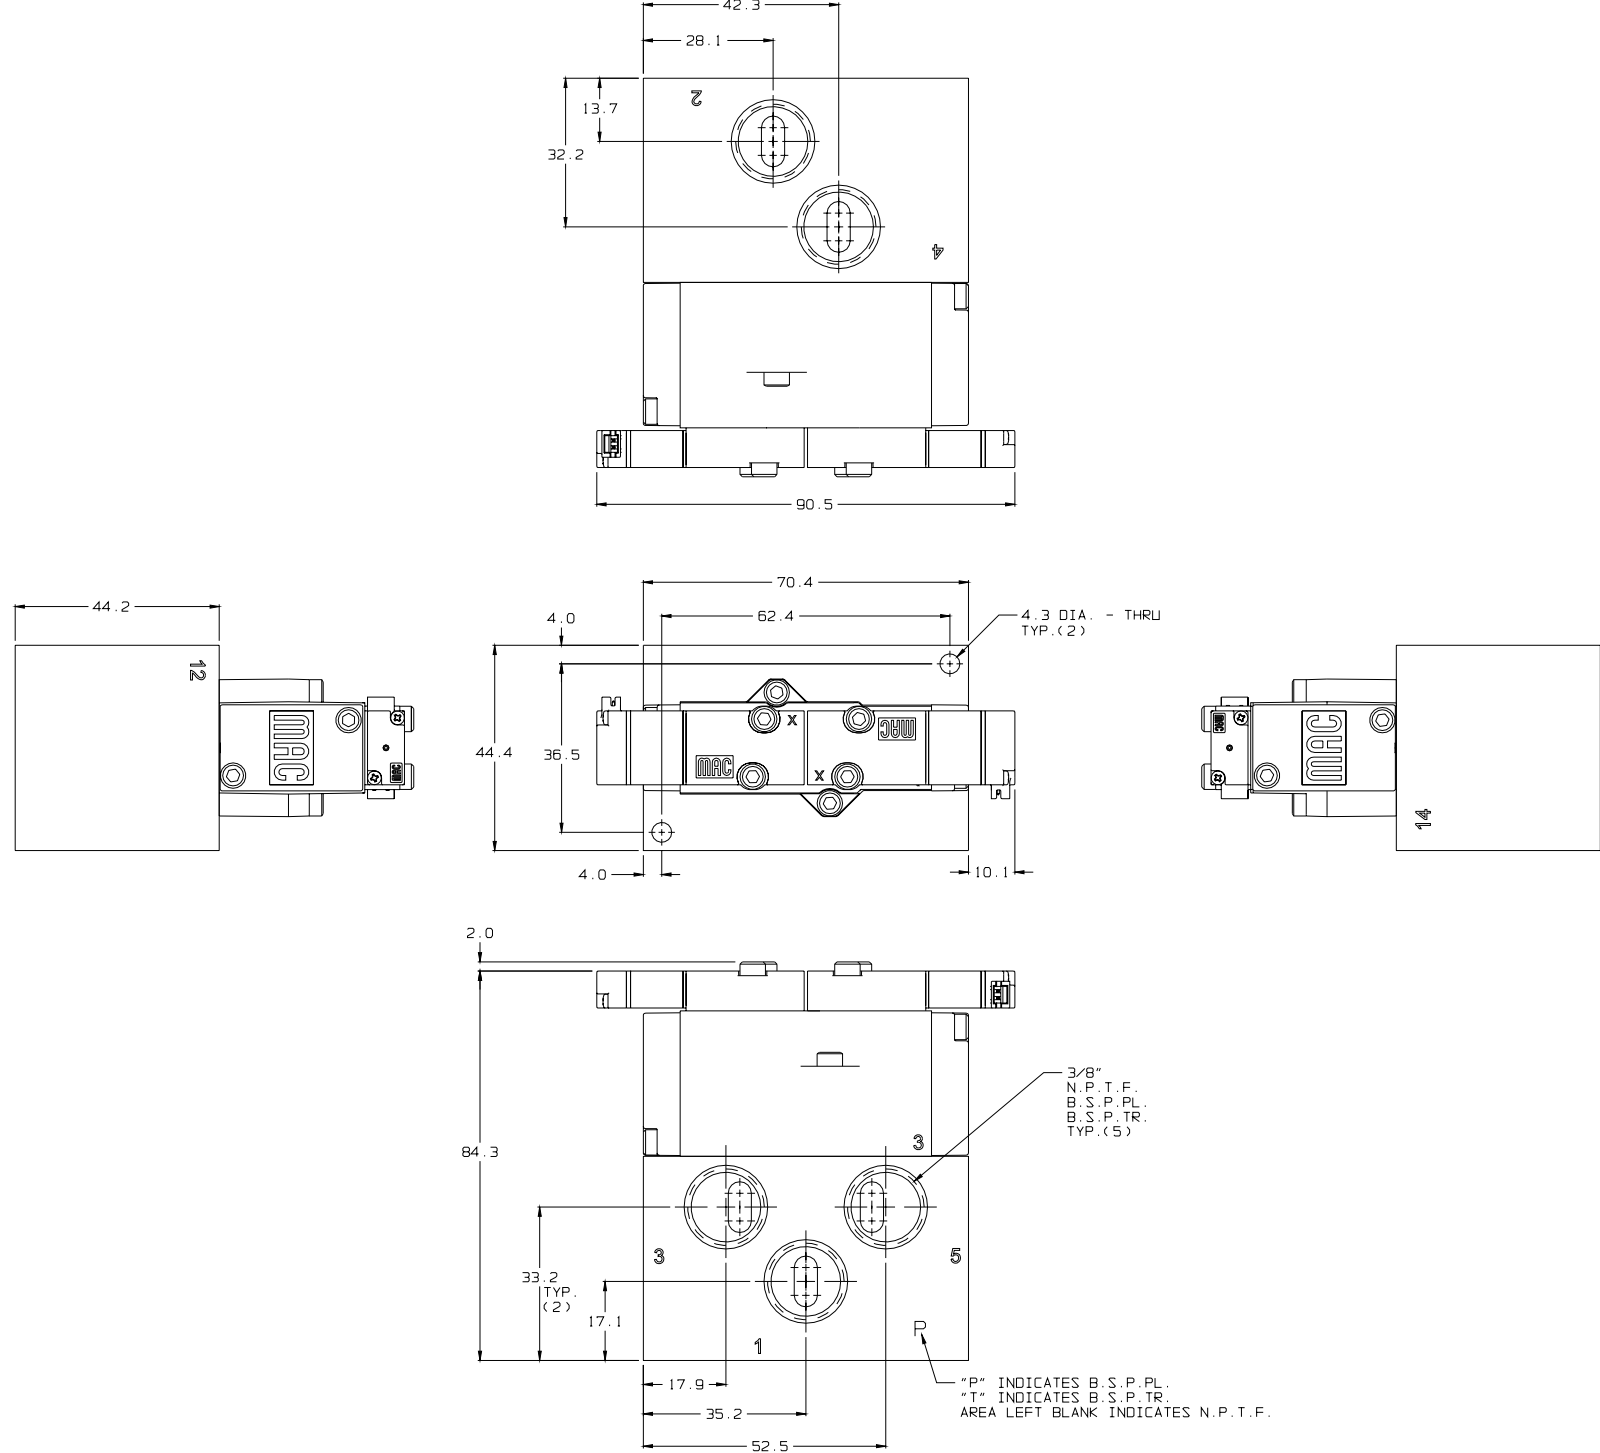 

 
 
 
 
 
83 Series Individual Base
 3/8" Side Ports
 (shown w/ RM3 Pilots)

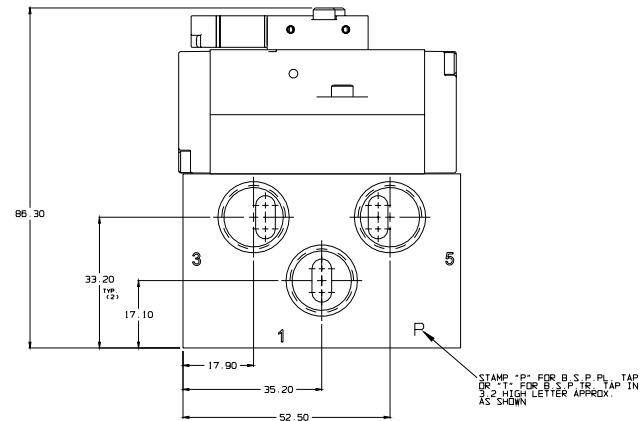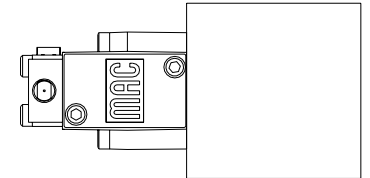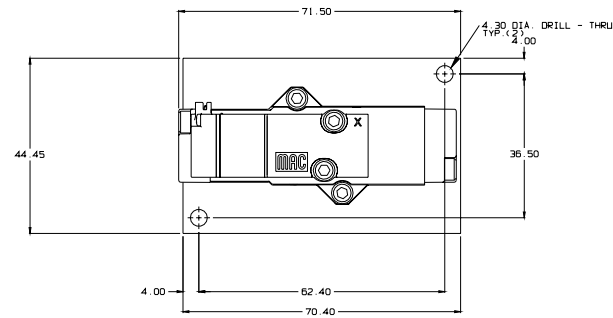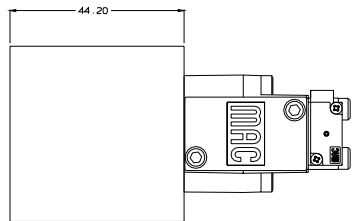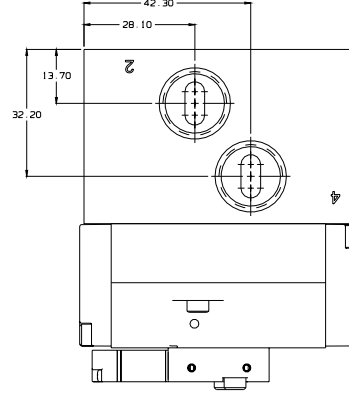





 
83 Series Single Solenoid
3/8" Side Ports
with RM Pilot

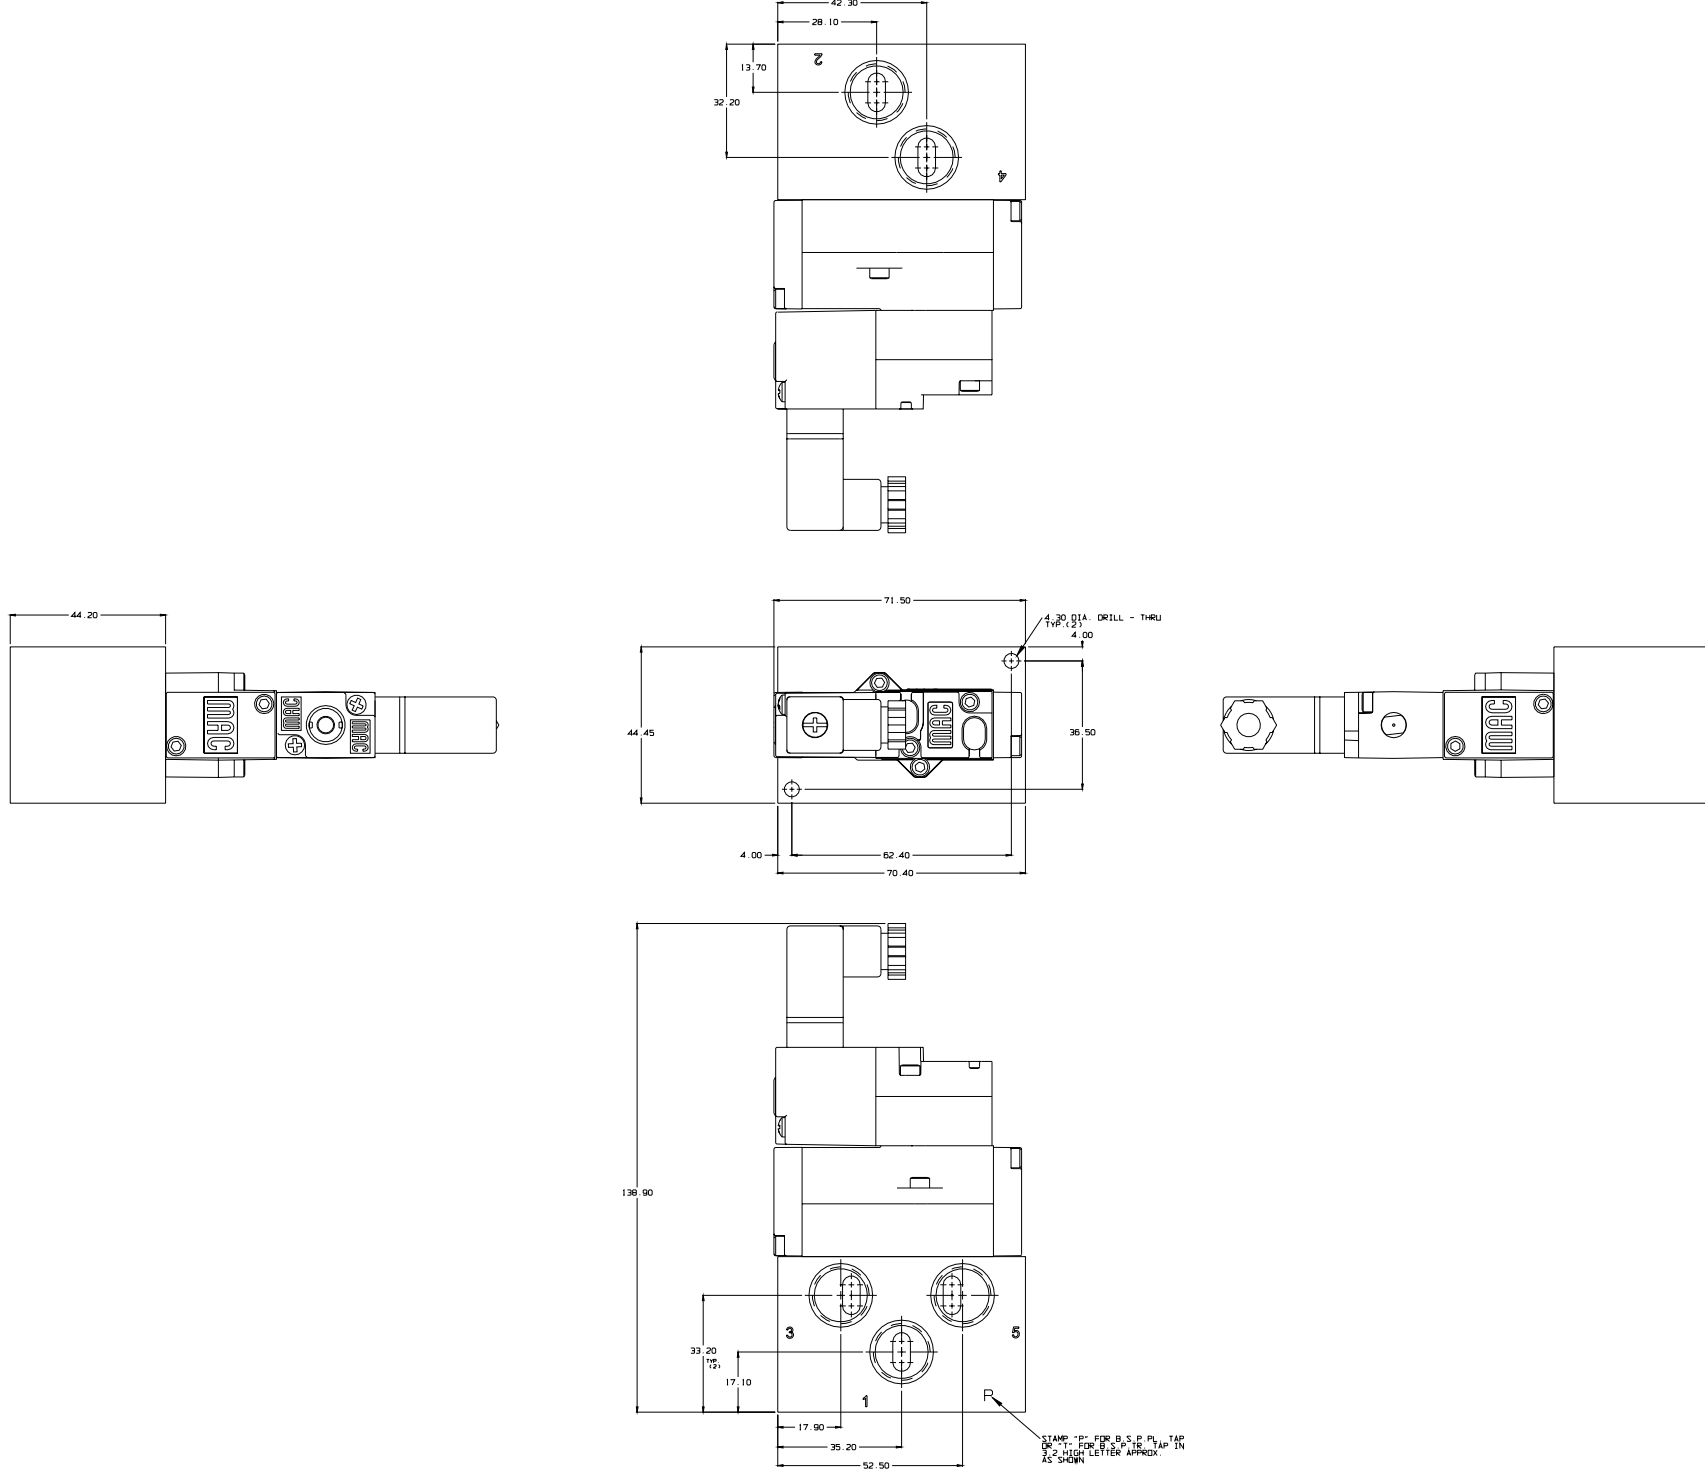

     83 Series Single Solenoid
3/8" Side Ports
with DM Pilot

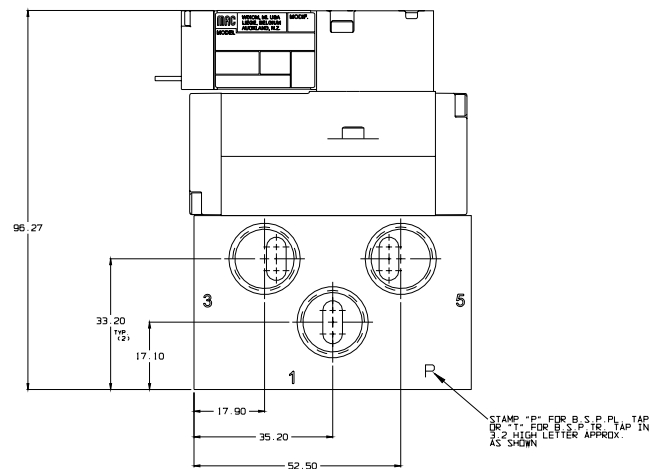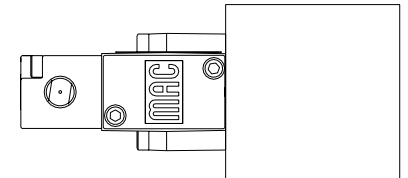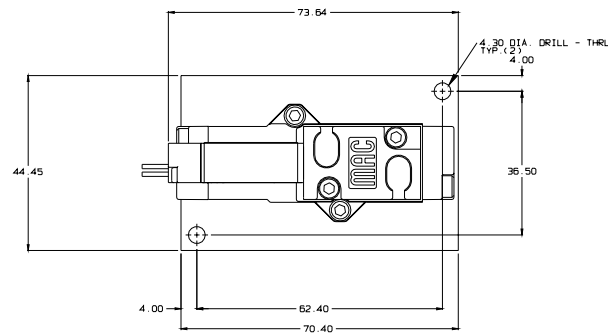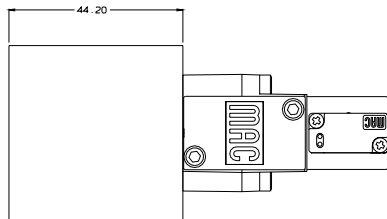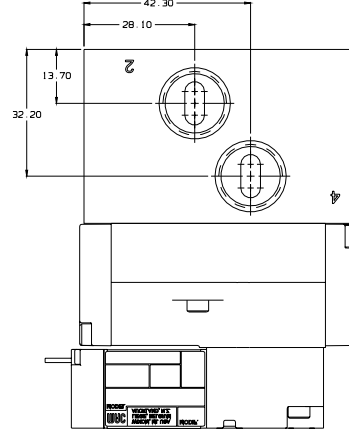

     83 Series Single Solenoid 3/8" Side Ports with GM Pilot

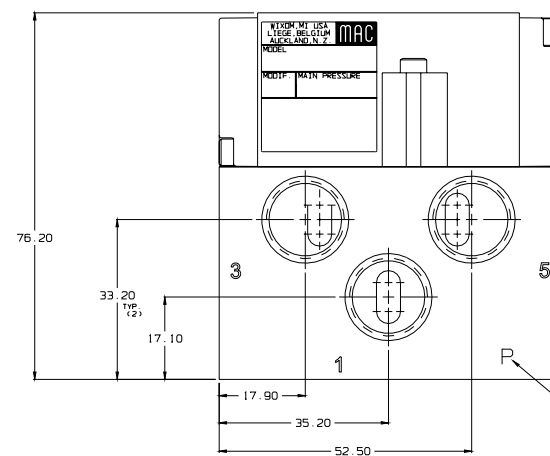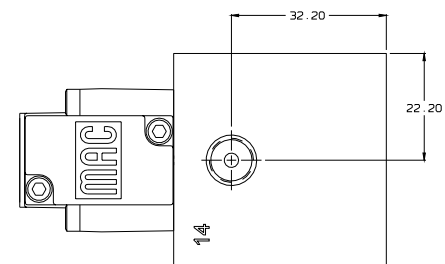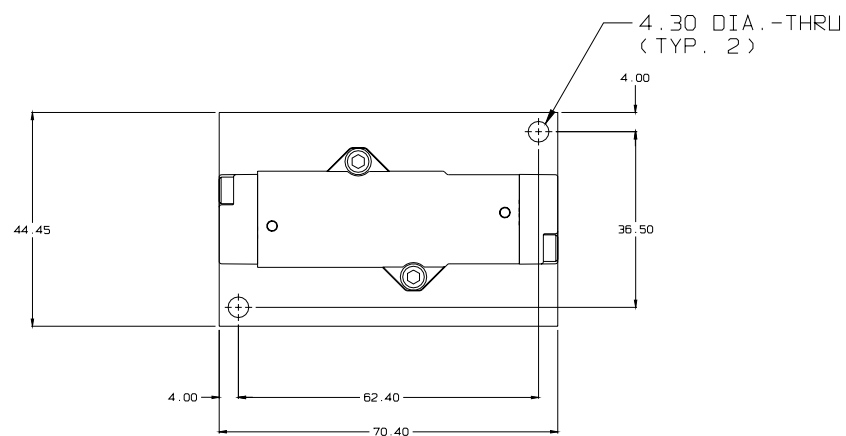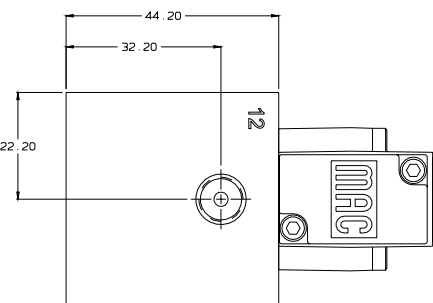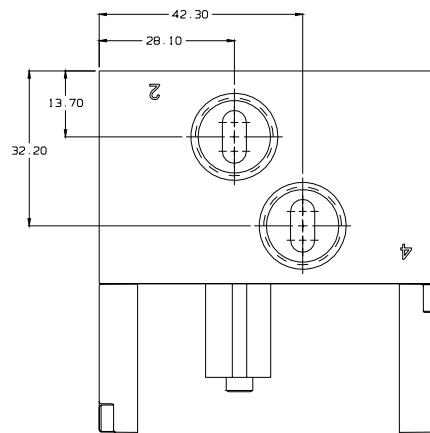

83 SERIES DOUBLE REMOTE AIR
BASE (SHOWN WITH 3/8" PORTS)

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://mac.nt-rt.ru> || mcp@nt-rt.ru