

Алматы (7273)495-231
 Ангарск (3955)60-70-56
 Архангельск (8182)63-90-72
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Благовещенск (4162)22-76-07
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Владикавказ (8672)28-90-48
 Владимир (4922)49-43-18
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Коломна (4966)23-41-49
 Кострома (4942)77-07-48
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Курган (3522)50-90-47
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Ноябрьск (3496)41-32-12
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16
 Петрозаводск (8142)55-98-37
 Псков (8112)59-10-37
 Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Саранск (8342)22-96-24
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13
 Сургут (3462)77-98-35
 Сыктывкар (8212)25-95-17
 Тамбов (4752)50-40-97
 Тверь (4822)63-31-35

Тольятти (8482)63-91-07
 Томск (3822)98-41-53
 Тула (4872)33-79-87
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Улан-Удэ (3012)59-97-51
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Чебоксары (8352)28-53-07
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Чита (3022)38-34-83
 Якутск (4112)23-90-97
 Ярославль (4852)69-52-93

Россия +7(495)268-04-70


Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://mac.nt-rt.ru> || mcp@nt-rt.ru

Individual mounting

inline

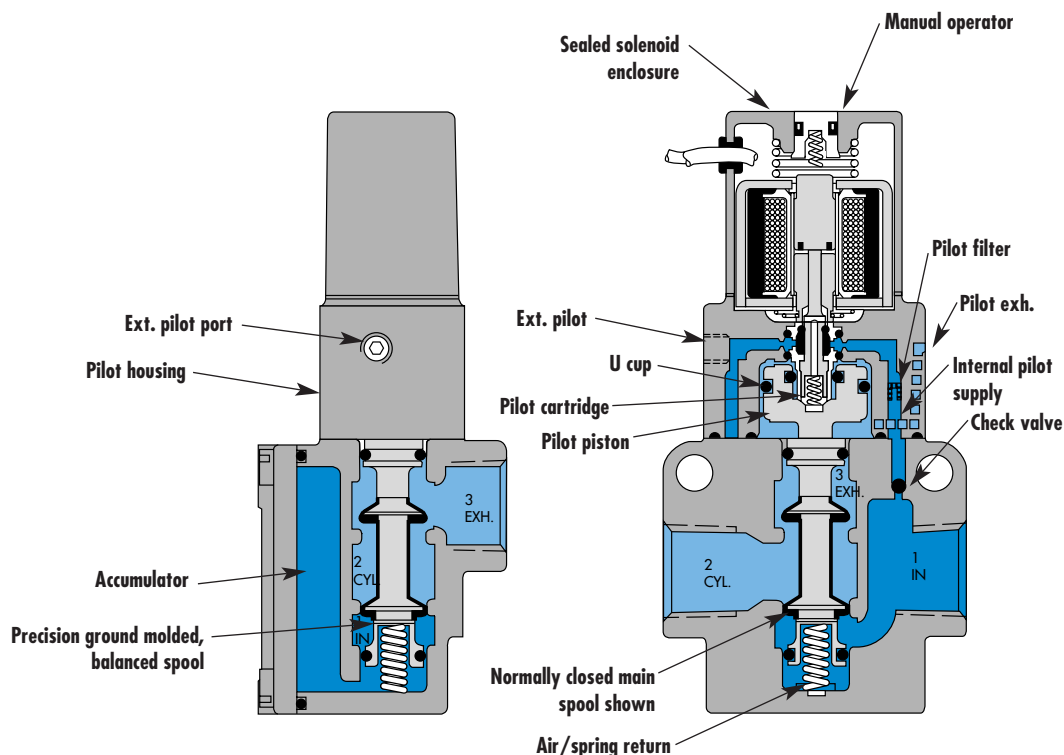

SERIES FEATURES

- The patented MACSOLENOID® with its non-burn out feature on AC service.
- Balanced spool unaffected by back pressure in the exhaust or by inlet restrictions.
May be plugged for 2-way operation.
- A large checked accumulator which supplies the pilot and air/spring return for consistent shifting.
- Use on lube or non-lube service.
- Extremely rapid response and cycle rate.
- Various types of manual operators and solenoid enclosures.
- Optional low wattage DC solenoids down to 1 watt.



VALVE CONFIGURATIONS AVAILABLE

- 3-Way Normally Open or Normally Closed (solenoid or remote air).
- 2-Way (by plugging a port) Normally Open or Normally Closed (solenoid or remote air).
- Internal pilot or External pilot for vacuum to 30 PSI main valve pressures on solenoid or 25 on remote air operated models. Manual and mechanical operators available.

SERIES FEATURES-REMOTE AIR PILOT OPERATED VALVES

These air versions feature:

- A large checked accumulator for air/spring return.
- Balanced spool unaffected by back pressure in the exhaust or by inlet restrictions. May be plugged for 2-way operation.
- Use on lube or non-lube service.

SERIES FEATURES-REMOTE AIR PILOT, PILOT OPERATED VALVES

These special air versions have the same features as the remote air pilot operated models, but additionally feature:

- Ability to use a pilot signal pressure different from the main valve pressure. Pilot signal can be from 30 to 150 PSI, regardless of main valve pressure.
- A manual operator and position indicator standard.

SPECIAL APPLICATIONS:

- VACUUM APPLICATIONS: Connect the vacuum source to port #3 with port #1 open to atmosphere, and use external pilot on solenoid pilot operated models. On remote air pilot models, use **-RE**.
- SELECTOR APPLICATIONS: Pipe higher pressure to port #1 and lower pressure to port #3.
- INTERNAL PILOT: Use for main valve pressure of 30 to 150 PSI on all models. Includes ball check in the body and an M5x0.8 plug installed in the external pilot port.
- EXTERNAL PILOT: An external pilot supply is required when main valve pressures are lower than 30 psi on solenoid pilot or 25 psi on remote air pilot operated models. To convert from internal to external pilot on solenoid models simply rotate pilot housing 180 degrees and connect external pilot source. (Use either M5 or #10-32 fitting.) On remote air pilot models, specify **-RE**.

Function	Port size	Flow [Max]	Individual mounting	Series
3/2 NO-NC, 2/2 NO-NC	1/4" - 3/8"	2.2 C_v	inline	


OPERATIONAL BENEFITS

- Balanced spool, immune to variations of pressure.
- Short stroke with high flow.
- The piston (booster) provides maximum shifting forces.
- Checked accumulator guarantees maximum pilot pressure.
- Powerful return force thanks to the combination of mechanical and air springs.
- Bonded spool with minimum friction, shifting in a glass-like finished bore.
- Wiping effect eliminates sticking.
- Pilot valve with balanced poppet, high flow, short and consistent response times.



35
100
200
55
56
57
58
59

HOW TO ORDER

Port size	Pilot air	NC valve	NO valve
			
1/4" NPTF	Internal	55B-11-PI- XXYYZZ	55B-21-PI- XXYYZZ
3/8" NPTF		55B-12-PI- XXYYZZ	55B-22-PI- XXYYZZ
1/4" NPTF	External	55B-11-PE- XXYYZZ	55B-21-PE- XXYYZZ
3/8" NPTF		55B-12-PE- XXYYZZ	55B-22-PE- XXYYZZ

45
700
900

SOLENOID OPERATOR >

XX Y ZZ*

XX	Voltage	Y	Manual operator	ZZ	Electrical connection
11	120/60, 110/50	1	Non-locking	JB	Rectangular connector
12	240/60, 220/50	2	Locking	JD	Rectangular connector with light
22	24/60, 24/50			JA	Square connector
59	24 VDC (2.5 W)			JC	Square connector with light
87	24 VDC (17.1 W)			BA	Flying leads (18")
61	24 VDC (8.5 W)			CA	Conduit 1/2" NPS

82

* Other options available, see page 349.

6300
6500
6600
1300
800
ISO 1
ISO 2
ISO 3
MAC 125A
MAC 250A
MAC 500A

TECHNICAL DATA

Fluid :	Compressed air, vacuum, inert gases		
Pressure range :	Internal pilot : 30 to 150 PSI External pilot : vacuum to 150 PSI		
Pilot pressure :	30 to 150 PSI		
Lubrication :	Not required, if used select a medium aniline point lubricant (between 180°F and 210°F)		
Filtration :	40 µ		
Temperature range :	0°F to 120°F (-18°C to 50°C)		
Flow (at 6 bar, ΔP=1bar) :	Norm. Closed : 1/4" (1.4 C _v), 3/8" (1.6 C _v), Norm. Open : 1/4" (1.8 C _v), 3/8" (2.2 C _v)		
Coil :	General purpose class A, continuous duty, encapsulated		
Voltage range :	-15% to +10% of nominal voltage		
Protection :	Consult factory		
Power :	~ Inrush : 14.8 VA Holding : 10.9 VA = 1 to 17 W		
Response times :	24 VDC (8.5 W)	Energize : 9 ms	De-energize : 4.8 ms
	120/60	Energize : 5-11 ms	De-energize : 5-11 ms

Spare parts :



- Solenoid operator (power ≥ 4 W) : D1-XXAA, cover mounting screws 35206 and seal 16234.
- Pilot valve : PID-XXYZZ, including mounting screws 35214 and seal 16363. • Check valve : 70061.

Options :

- BSPP threads.

DIMENSIONS

Dimensions shown are metric (mm)

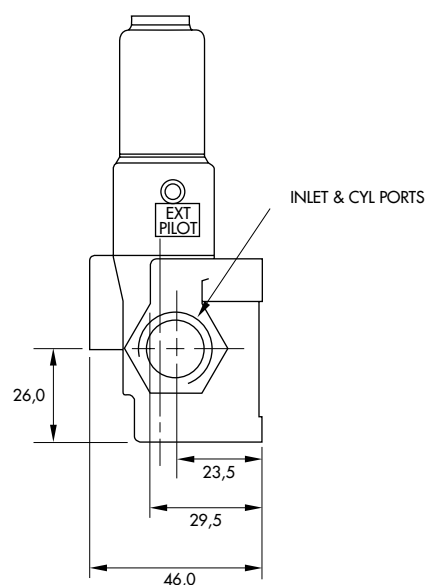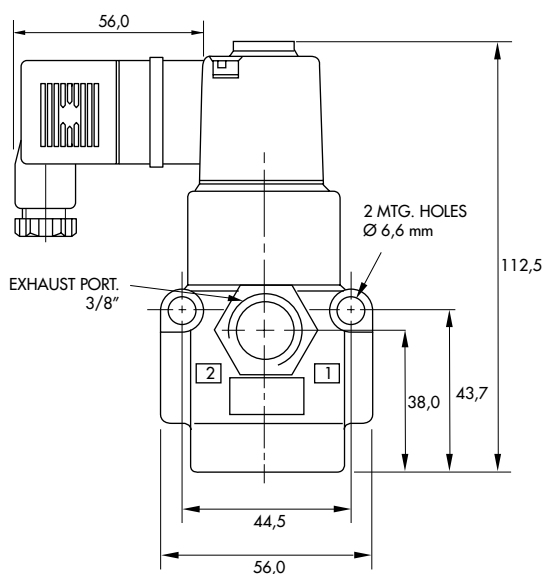



0 p t i 0 n s

Codification table for voltages / Manual operator / Electrical connection / Wire length

VALVE CODE ➤ **-XX Y ZZ (-VV)**
1 2 3 4

OPTIONS AVAILABLE FOR	OPTIONS AVAILABLE FOR
- valves type 100 Series - pilot valves "CNOMO"	- valves type 200 Series
- Pilot operated valves with pilots type 100 Series - Series : 55 - 56 - 700 - 800 - 900 - 6300 - 6500 - 6600 - 1300 - ISO 1 - ISO 2 - ISO 3. - MAC 125 - MAC 250 - MAC 500	- pilot operated valves with pilots type 200 Series - Series : 200 - 57 - 58 - 59.
- Pilot operated valves with pilots "CNOMO" - Series : ISO1 - ISO2 - ISO3	

Used on valve series: 100, 55, 56, 700, 800, 900, 6300, 6500, 6600, 1300, MVA1C, MVA2B, MVA3B, MAC125, MAC250, MAC500.

1. VOLTAGE (100 Serie type coil)

- XX Y ZZ	VOLTAGE
11	120/60, 110/50
12	240/60, 220/50
13	100/60, 100/50
15	200/60, 200 /50
16	10/60
20	6/60
21	12/50, 12/60
22	24/60, 24/50
23	32/60, 32/50
24	48/60, 42/50
26*	380/50, 440/50, 440/60, 480/60
29	220/60
34	127/50, 120/50
35	48/50
36	16/60
B1	24/50
50	24 VDC (6 W)
51	24 VDC (4 W)
54	12 VDC (4 W)
55	12 VDC (6 W)
57	12 VDC (2.5 W)
59	24 VDC (2.5 W)
60	12 VDC (8.5 W)
61	24 VDC (8.5 W)
64	6 VDC (6 W)
65	32 VDC (7 W)
66	48 VDC (5.8 W)
67	64 VDC (7.5 W)
68	120 VDC (6.4 W)
69*	220 VDC (8.7 W), 250 VDC (11.2 W)
75	90 VDC (8.8 W)
76*	100 VDC (6.9 W)
84*	125 VDC (10.9 W)
87*	24 VDC (17.1 W)
88*	12 VDC (17.4 W)
89*	36 VDC (18.8 W)
90	28 VDC (8.2 W)
91*	6 VDC (10.6 W)
92	190 VDC (6.5 W)
94	3 VDC (7 W)
95	38 VDC (6.4 W)
A1	24 VDC (1 W)
A2	12 VDC (1 W)
A3	9 VDC (1 W)

MOD. DD01 : Protection diode (DC) - MAX. 8.5W

MOD. MOV1 : Protection varistor (AC) - MAX. 8.5W

* Voltages are CLSF only

Used on valve series: 200, 57, 58, 59.

1. VOLTAGE (200 Serie type coil)

- XX Y ZZ	VOLTAGE
11	120/60, 110/50, 24 VDC (6 W)
12	240/60, 220/50
13	100/60, 100/50
14	200/60, 200/50
20	6/60
21	12/60
22	24/60, 24/50
23	32/60, 32/50
24	48/60, 42/50
25	240/50
26	480/60, 440/50
27	127/60
28	415/50
29	220/60
30	380/50
31	550/60, 550/50
32	120/60, 110/50
33	600/60
34	127/50
35	48/50
50	24 VDC (6 W)
51	24 VDC (4.5 W)
52	24 VDC (2.5 W)
53	24 VDC (1.0 W)
55	12 VDC (6 W)
57	12 VDC (2.5 W)
58	48 VDC (2.5 W)
60	12 VDC (9.5 W)
61	24 VDC (8.5 W)
64	6 VDC (8.5 W)
65	32 VDC (10 W)
66	48 VDC (11.5 W)
67	64 VDC (10.5 W)
68	120 VDC (12.3 W)
69	250 VDC (9.2 W)
71	8 VDC (8.2 W)
72	24 VDC (12 W)
73	198 VDC (10 W)
74	72 VDC (11.3 W)
75	90 VDC (11.3 W)
76	100 VDC (9 W)
77	220 VDC (10 W), 230 VDC (11.6 W)
78*	24 VDC (24 W)
80	55 VDC (10.6 W)
82	170 VDC (11.1 W)
83	15 VDC (8.1 W)
84	125 VDC (10 W)
86	36 VDC (11 W)
93*	12 VDC (24 W)

2. MANUAL OPERATOR (Common options for 100 & 200 Series type coils)

- XX Y ZZ	MANUAL OPERATOR		
0	No operator	5*	No Operator with Light
1	Non-locking recessed	6*	Non-Locking Recessed with Light
2	Locking recessed	7*	Locking Recessed with Light
3	Non-locking extended	8*	Non-Locking Extended with Light
4	Locking extended	9*	Locking Extended with Light

* Lights used with "AA" electrical connection

3. ELECTRICAL CONNECTION (100 Serie type coil)

- XX Y ZZ	ELECTRICAL CONNECTION
AA	Wiring box with 1/2" NPS conduit
BA	Flying leads
CA	1/2" NPS conduit
CC	1/2" NPT conduit
FA	Military type 2 PIN
GA	Military type 3 PIN
HA	AA with ground wire
JA*	Square connector
JB	Rectangular connector
JC*	Square connector with light
JD	Rectangular connector with light
JE	Square connector on top (ISO2, ISO3)
JF	Rectangular connector on top (ISO1, ISO2, ISO3)
JG	JE with light
JH	JF with light
JJ	Square connector, male only
JM	Rectangular connector, male only
MA	Electrical common conduit (100 Series-Manifold/900 Series)
MB	Electrical common conduit (100 Series-Stacking/700 Series)
NA	CA with ground wire
NC	CC with ground wire
RA	3/8" NPS conduit

* Not to be used with 100, 800 and 900 Series manifold mounting

3. ELECTRICAL CONNECTION (200 Serie type coil)

- XX Y ZZ	ELECTRICAL CONNECTION
AA	Wiring box with 1/2" NPS conduit
BA	Flying leads
CA	1/2" NPS conduit
CC	1/2" NPT conduit
EA	Explosion proof (200 Series)
EA	Explosion proof (57, 58 & 59 Series)
FA	Military type 2 PIN
GA	Military type 3 PIN
HA	AA with ground wire
JA*	Square connector
JC	Square connector with light
JJ	Square connector, male only
NA	CA with ground wire
NC	CC with ground wire

4. COIL WIRE LENGTH (Common options for 100 & 200 Serie type coils)

- XX Y ZZ (-VV)	WIRE LENGTH
AA	18"
AB	24"
AD	36"
AE	48"
AF	72"
AG	6"
AR	12"
AU	120"
BA	60"
BB	144"
Series 6000 : wire length, from the base	
MOD L024	24"
MOD L036	36"
MOD L048	48"
MOD L060	60"
MOD L072	72"
MOD L120	120"

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47