

Алматы (7273)495-231	Иваново (4932)77-34-06	Магнитогорск (3519)55-03-13	Ростов-на-Дону (863)308-18-15	Тольятти (8482)63-91-07
Ангарск (3955)60-70-56	Ижевск (3412)26-03-58	Москва (495)268-04-70	Рязань (4912)46-61-64	Томск (3822)98-41-53
Архангельск (8182)63-90-72	Иркутск (395)279-98-46	Мурманск (8152)59-64-93	Самара (846)206-03-16	Тула (4872)33-79-87
Астрахань (8512)99-46-04	Казань (843)206-01-48	Набережные Челны (8552)20-53-41	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Нижний Новгород (831)429-08-12	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Новокузнецк (3843)20-46-81	Севастополь (8692)22-31-93	Улан-Удэ (3012)59-97-51
Благовещенск (4162)22-76-07	Кемерово (3842)65-04-62	Ноябрьск (3496)41-32-12	Саранск (8342)22-96-24	Уфа (347)229-48-12
Брянск (4832)59-03-52	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Владивосток (423)249-28-31	Коломна (4966)23-41-49	Омск (3812)21-46-40	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Владикавказ (8672)28-90-48	Кострома (4942)77-07-48	Орел (4862)44-53-42	Сочи (862)225-72-31	Череповец (8202)49-02-64
Владимир (4922)49-43-18	Краснодар (861)203-40-90	Оренбург (3532)37-68-04	Ставрополь (8652)20-65-13	Чита (3022)38-34-83
Волгоград (844)278-03-48	Красноярск (391)204-63-61	Пенза (8412)22-31-16	Сургут (3462)77-98-35	Якутск (4112)23-90-97
Вологда (8172)26-41-59	Курск (4712)77-13-04	Петрозаводск (8142)55-98-37	Сыктывкар (8212)25-95-17	Ярославль (4852)69-52-93
Воронеж (473)204-51-73	Курган (3522)50-90-47	Псков (8112)59-10-37	Тамбов (4752)50-40-97	
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пермь (342)205-81-47	Тверь (4822)63-31-35	

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://mac.nt-rt.ru> || mcp@nt-rt.ru

Specifications

26 Series Valve

Fluids:

Compressed air or inert gases

Lubrication:

Not required. If used, select a medium aniline point lubricant (between 180° and 210°F)

Safe Operating Temperature Range:

0°F to 120°F (-18°C to 50°C)

Pressure Range:

Main Valve: Vacuum to 100 PSI (External pilot)
40 to 100 PSI (Internal pilot)

External pilot: 40 to 100 PSI

Flow:

Cv = .25 (Higher flows available - consult factory)

Voltage:


DC 12/24 Volt 1.0w to 4.0w (Higher wattages available - consult factory)

Coil:

#24 AWG x 18 lead wires


How To Order 26 Series Valve

26A - X X - X X X - XX - B XX X - X XX

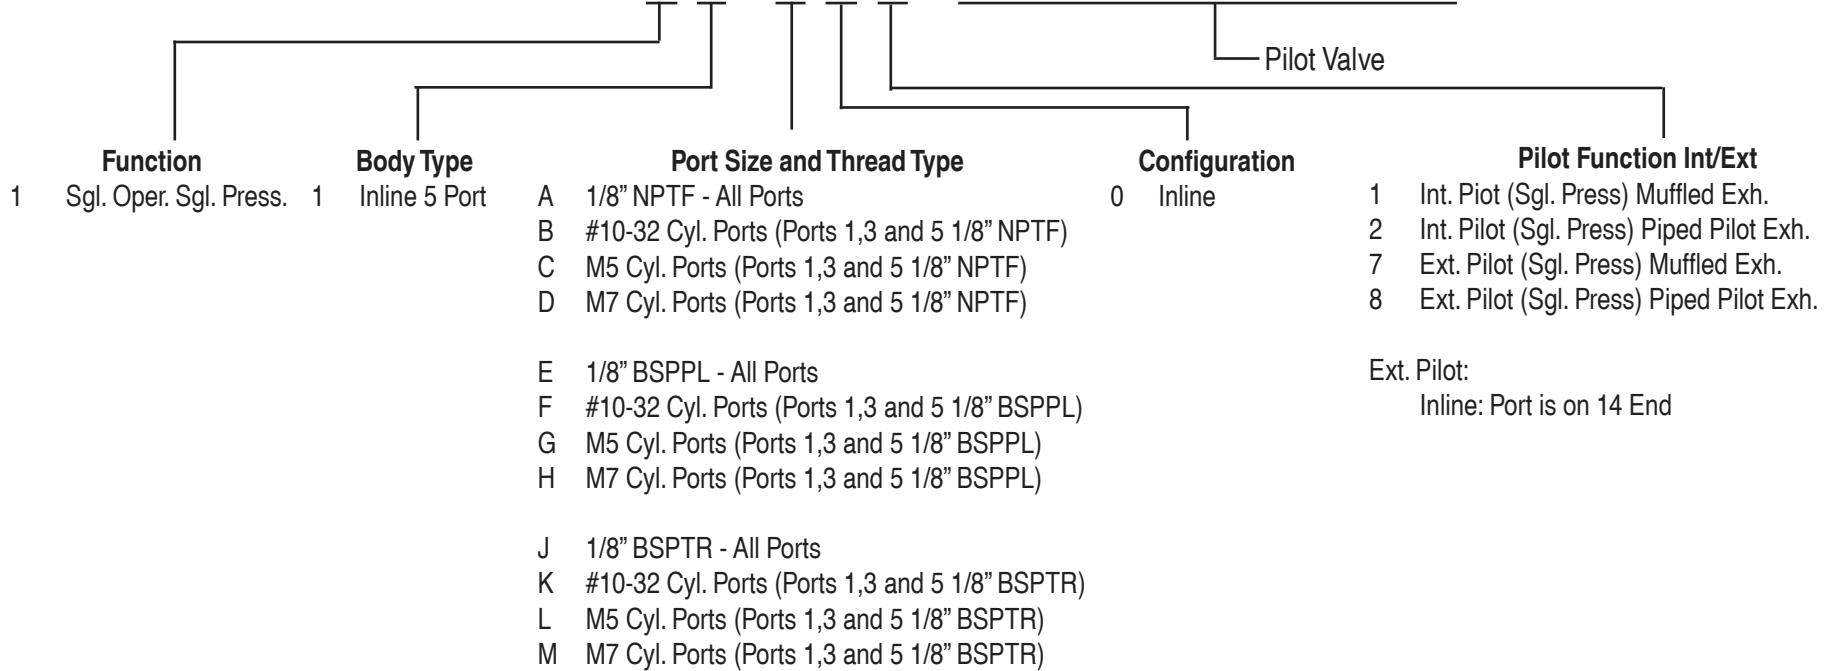

Note: External Pilot Port is #10-32 when ports are NPTF or #10-32
External Pilot Port is M5 when ports are BSPPL, BSPTR, M5 or M7

How to Order Pilot Valve Options For 26 Series

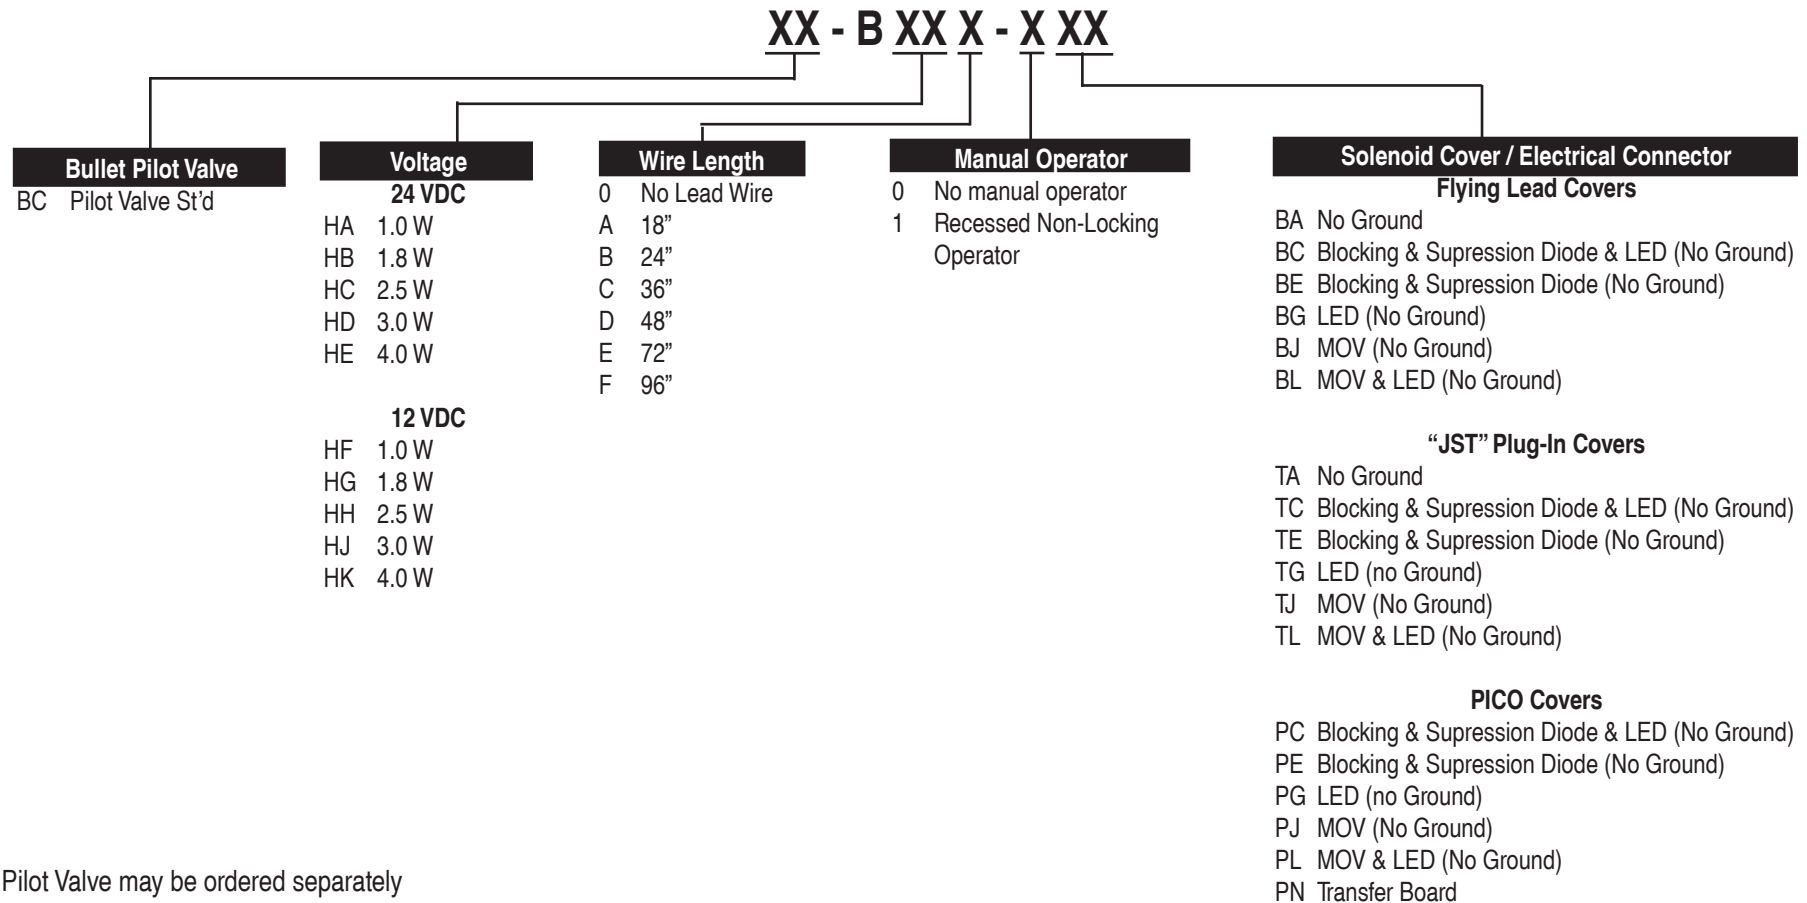

Pilot Valve may be ordered separately
BCA-BXXX-XXX

Note: PICO covers PC-PL have a third pin which is a location pin

How to Order Pilot Valve Options For 26 Series

Modification 8484

XX - B XX X - X XX

Bullet Pilot Valve

BD Diaphragm

Voltage

24 VDC

KP 6.0 W

KR 12.0 W

Wire Length

0 No Lead Wire

A 18"

B 24"

C 36"

D 48"

E 72"

F 96"

Manual Operator

1 Recessed Non-Locking
Operator

Solenoid Cover / Electrical Connector

Flying Lead Covers

BA No Ground

"JST" Plug-In Covers





TA No Ground

PICO Covers




PN Transfer Board

☐ or ☐ ☐ ☐ ☐ A = 1/8" NPTF - All Ports
B = #10-32 Cyl. Ports (Ports 1,3 & 5 1/8" NPTF)
C = M5 Cyl. Ports (Ports 1,3 & 5 1/8" NPTF)
D = M7 Cyl. Ports (Ports 1,3 & 5 1/8" NPTF)



26 SERIES - INLINE VALVE WITH BULLET VALVE PILOT

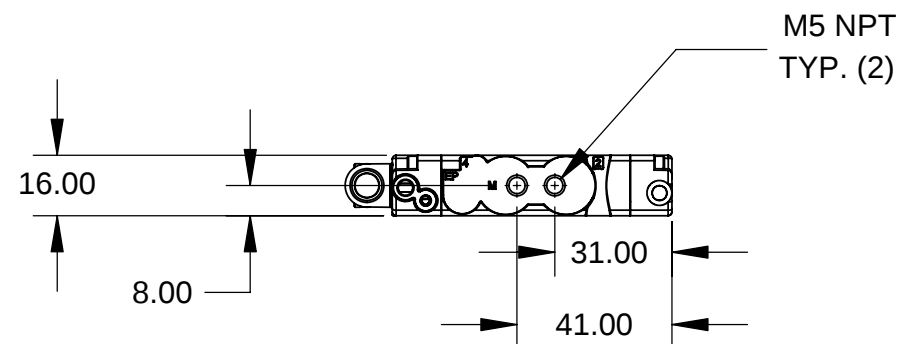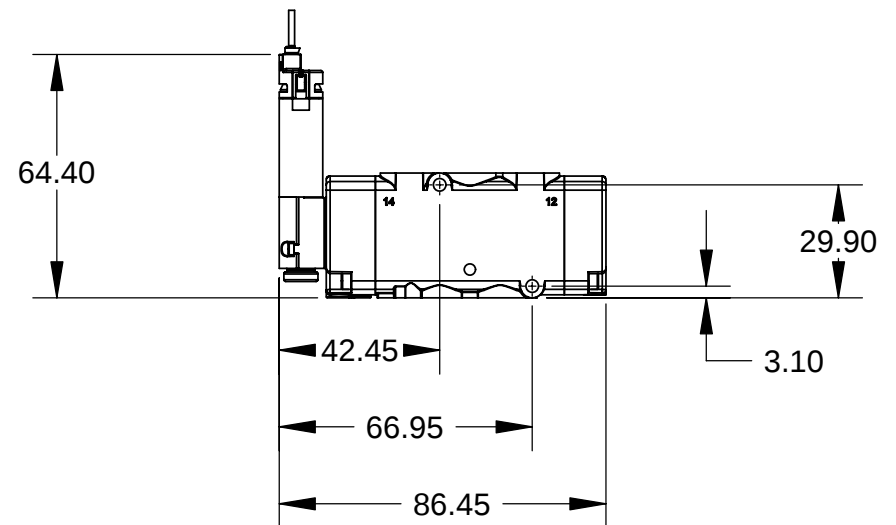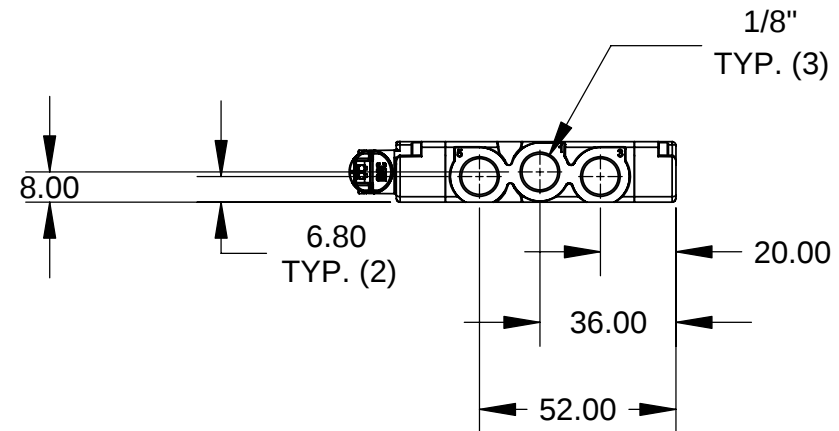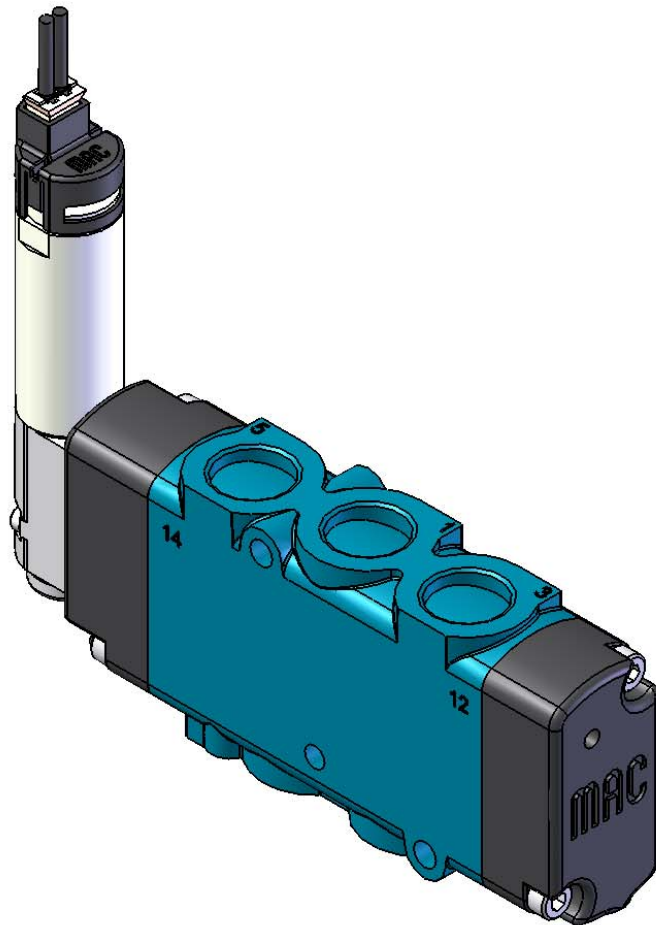



26 SERIES - INLINE VALVE WITH BULLET VALVE PILOT

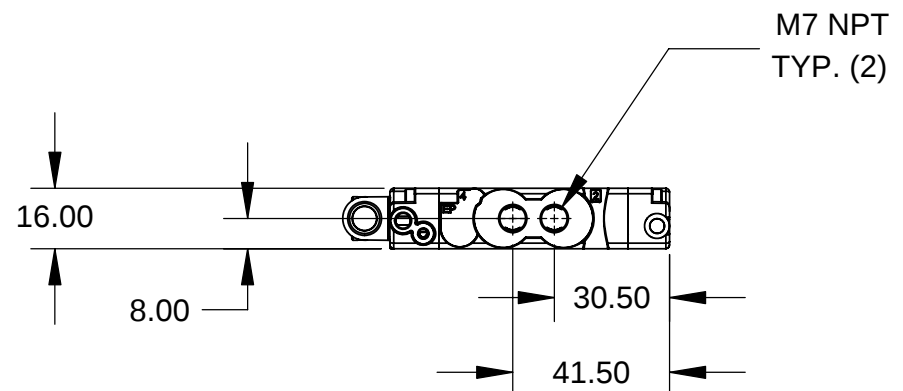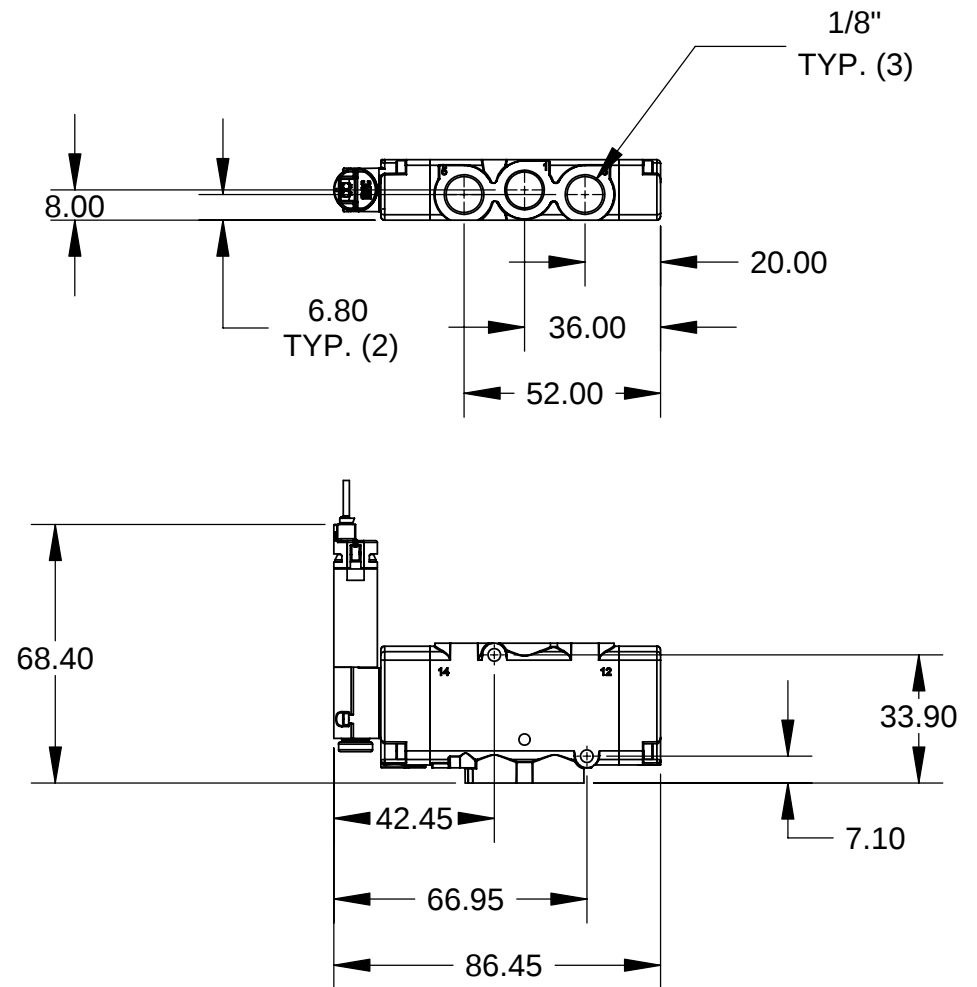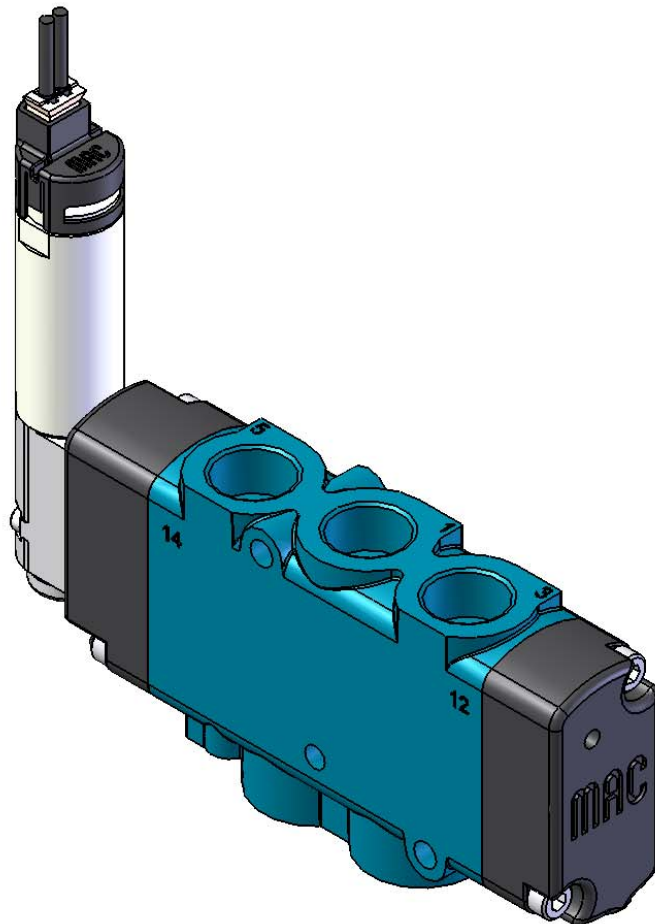

26 SERIES - INLINE VALVE WITH BULLET VALVE PILOT

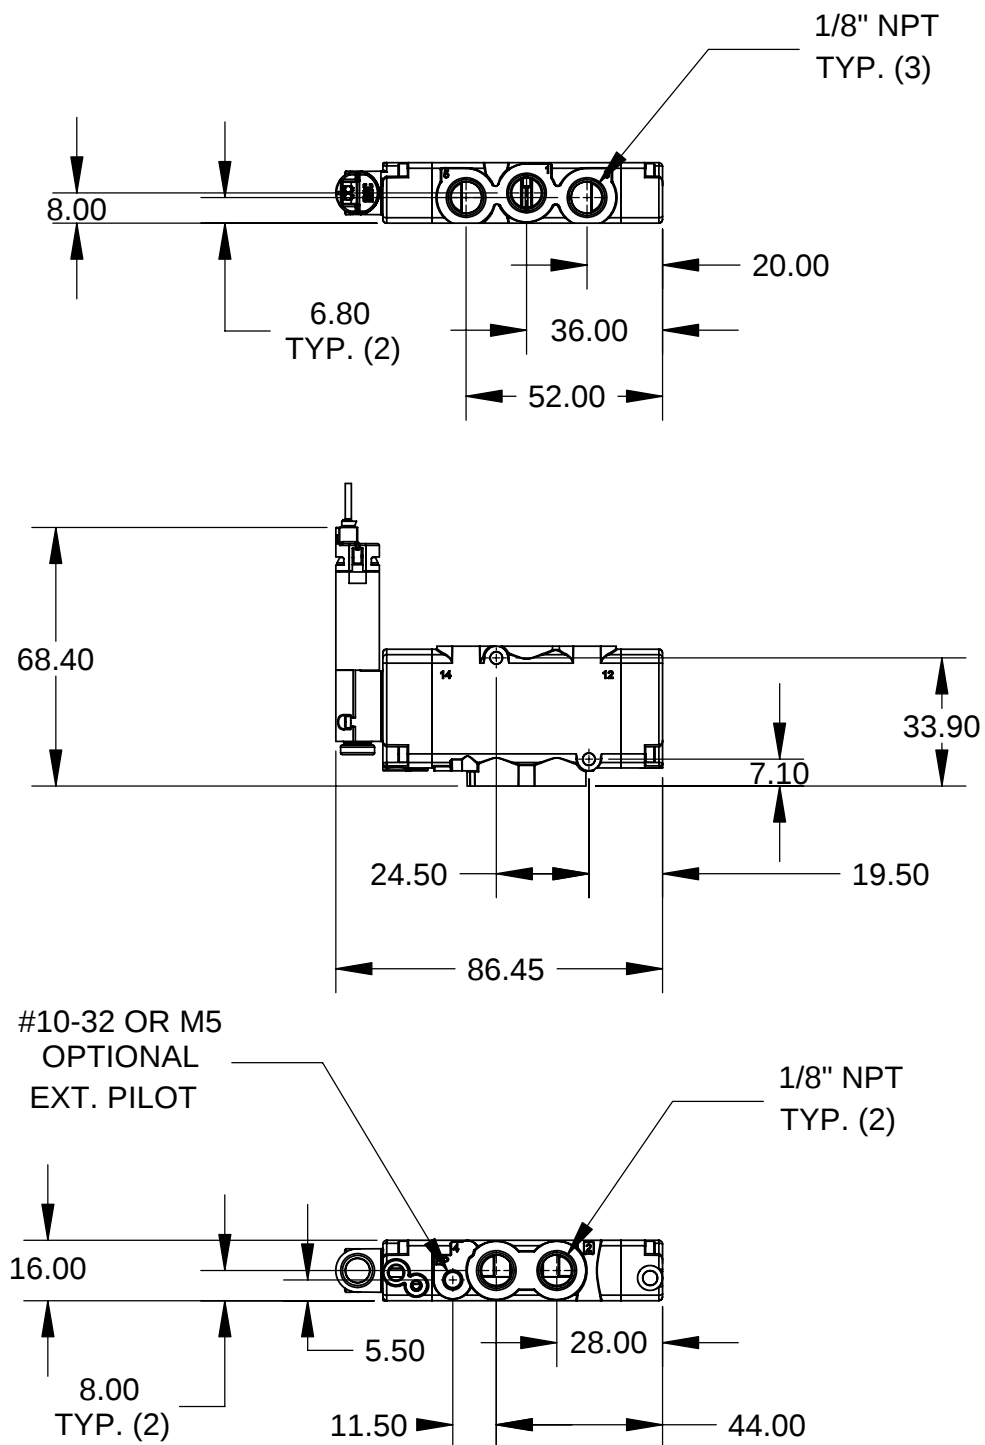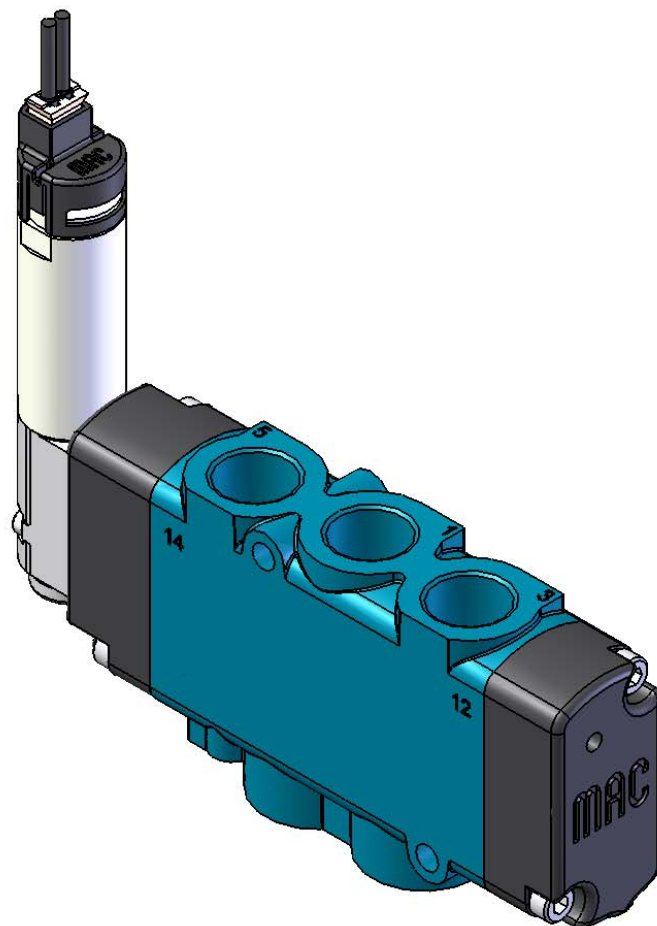

26 SERIES - INLINE VALVE WITH BULLET VALVE PILOT

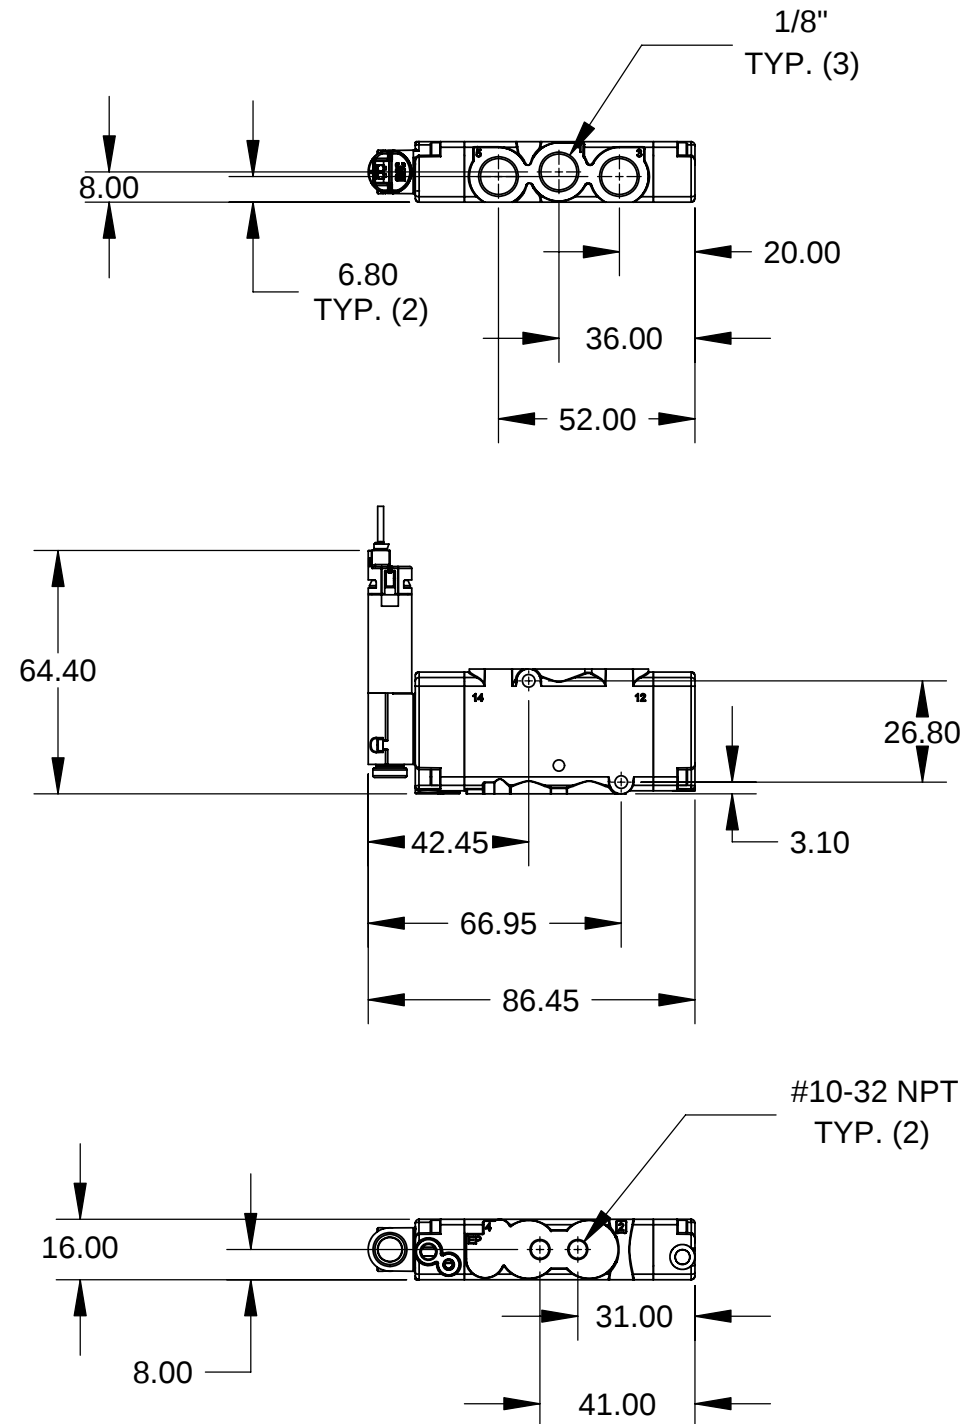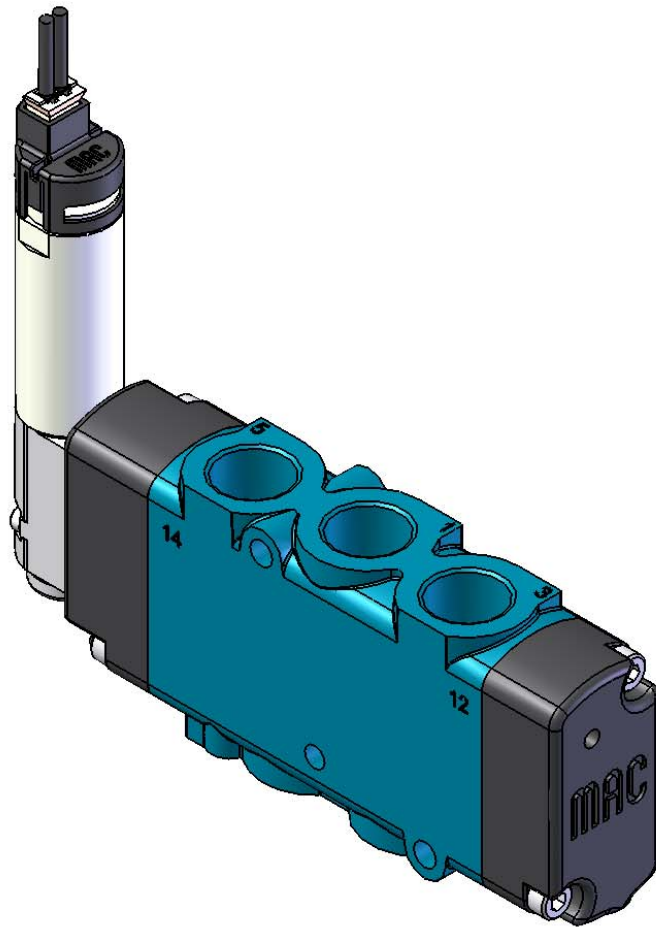

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://mac.nt-rt.ru> || mcp@nt-rt.ru